

HP 9000 Computers
Using Network Services



Customer Order Number: B1012-90009
Printed in England, February 1991

Notice

Hewlett-Packard makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Hewlett-Packard assumes no responsibility for the use or reliability of its software on equipment that is not furnished by Hewlett-Packard.

© Copyright 1991, Hewlett-Packard Company.

This document contains proprietary information, which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced or translated to another language without the prior written consent of Hewlett-Packard Company. The information contained in this document is subject to change without notice.

Restricted Rights Legend

Use, duplication, or disclosure by the Government is subject to restrictions as set forth in paragraph (b)(3)(B) of the Rights in Technical Data and Software clause in DAR 7-104.9(a).

© Copyright 1980, 1984, 1986, AT&T, Inc.

© Copyright 1979, 1980, 1983, 1985-1990, The Regents of the University of California.

© Copyright, 1979, 1986, 1987, 1988, Sun Microsystems, Inc.

This software and documentation is based in part on the Fourth Berkeley Software Distribution under license from the Regents of the University of California.

UNIX® is a registered trademark of AT&T in the U.S.A. and in other countries.

NFS is a trademark of Sun Microsystems, Inc.

*Hewlett-Packard Company
19420 Homestead Road
Cupertino, CA 95014 U.S.A.*

Printing History

First Edition

February 1991

Conventions

The table below explains the conventions used in this manual.

| Conventions | |
|--------------------|--|
| Notation | Description |
| Boldface | Boldface type is used when a term is defined. |
| Computer Text | Computer type is used for commands and keyboard entries that you must type exactly as shown. It is also used for on-screen prompts and messages. |
| <i>italics</i> | Italic type is used for emphasis and for titles of manuals and publications. Italic type is also used to represent a variable, such as <i>nodename</i> . |
| [Key] | This font is used to indicate a key on the computer's keyboard. When two or more keys appear together with dashes separating them, such as [Ctrl][D] press those keys simultaneously to execute the command. |
| Softkey | This font is used to represent function softkeys that appear at the bottom of your screen. |
| <u>Underlining</u> | Underlining is used to emphasize a user entry. It distinguishes what you type, such as a command, from other data on the command line, such as the command prompt, a computer response, or a variable. For example: \$ <u>ds</u> copy filename1 filename2 |
| [] | An element inside brackets in a syntax statement is optional. Several elements stacked inside brackets means you may select any one or none of these elements. |

| Conventions | |
|-------------|--|
| Notation | Description |
| { } | <p>When several elements are stacked within braces in a syntax statement, the user must select one of those elements. For example:</p> <p>{A} {B} {C} You must select A, B, or C option.</p> |
| ... | <p>A horizontal ellipsis in a syntax statement indicates that a previous element may be repeated. For example:</p> <p>[option][option]...</p> <p>In addition, vertical and horizontal ellipses may be used in examples to indicate that portions of the example have been omitted.</p> |
| Δ | <p>When necessary for clarity, the symbol Δ may be used in a syntax statement to indicate a required blank or an exact number of blanks. For example:</p> <p>SET[<i>modifier</i>]Δ<i>variable</i></p> |

Table of Contents

Chapter1: Product Overview

| | |
|---------------------------------------|-----|
| Overview | 1-1 |
| Network Architecture | 1-3 |
| User Services | 1-5 |
| Node Management Services and Features | 1-6 |
| Node Names | 1-7 |

Chapter2: Network File Transfer

| | |
|-----------------------------|------|
| Overview | 2-1 |
| NFT Terminology | 2-3 |
| File Copying Formats | 2-4 |
| Transparent Format | 2-4 |
| Interchange Format | 2-5 |
| Using dscopy Command | 2-7 |
| dscopy Syntax | 2-7 |
| dscopy Parameters | 2-7 |
| dscopy Description | 2-7 |
| Copy Descriptor Syntax | 2-8 |
| Copy Descriptor Parameters | 2-8 |
| dscopy Examples | 2-12 |
| Security | 2-14 |
| File Protection | 2-14 |
| Password Security | 2-15 |
| Using Escape Characters | 2-16 |
| HP-UX Signals | 2-17 |
| Errors | 2-18 |
| dscopy Options | 2-19 |
| NFT and the HP-UX File Type | 2-23 |

Chapter3: Logging into an HP 3000 with VT3K

| | |
|---|------|
| Overview | 3-1 |
| Terminals You Can Use with VT3K | 3-2 |
| Using VT3K | 3-3 |
| Invoking VT3K | 3-3 |
| Logging into the Remote Host | 3-4 |
| Responding to Unexpected Results when Using vt3k | 3-5 |
| NetIPC Errors | 3-5 |
| Descriptions for Terminating vt3k Codes | 3-5 |
| Exiting VT3K | 3-6 |
| Logging Out of the Remote HP 3000 | 3-6 |
| Returning to HP-UX from the MPE Login Prompt | 3-7 |
| Aborting and Suspending VT3K | 3-8 |
| Activating VT3K Escape Command Mode | 3-8 |
| Aborting VT3K | 3-8 |
| Suspending VT3K | 3-9 |
| Continuing VT3K | 3-10 |
| Using Input Files With VT3K | 3-11 |
| Protecting Your VT3K Input Files | 3-11 |
| Using an Input File for Automatic Login and Command Execution | 3-12 |
| Using an Input File for Automatic Execution | 3-13 |
| Logging Input and Output to a File | 3-14 |
| Enabling Typeahead | 3-15 |
| Changing Break Count and Timing Values | 3-16 |

Appendix A: ASCII Character Set

Appendix B: Error Messages

| | |
|---------------------------------|-----|
| Overview | B-1 |
| dscopy Error Messages | B-2 |

Appendix C: Network Services/HP 9000 Migration

| | |
|--|-----|
| NS/9000 for DS/1000-IV Users | C-2 |
| Feature Comparison | C-2 |
| File Transfer | C-3 |
| Interprocess Communication | C-4 |
| Remote Resource Access | C-7 |

| | | |
|------------------------------|-----------|------|
| NS/1000 to NS/9000 Migration | | C-8 |
| Network File Transfer (NFT) | | C-9 |
| NS/1000 DSCOPY Syntax | | C-9 |
| NS/9000 dscopy Syntax | | C-10 |
| NS/1000 Copy Descriptor | | C-10 |
| NS/9000 Copy Descriptor | | C-10 |
| Copy Descriptor Parameters | | C-10 |
| DSCOPY Options | | C-11 |
| DSCOPY Commands | | C-12 |
| Programmatic Interface | | C-12 |

Index

Product Overview

Overview

Hewlett-Packard Network Services for HP 9000 computers is a data communications product that enables HP computer systems to exchange information and share resources in a **computer network**. A computer network is a collection of many types of equipment and software. The major components of a network are generally designated as **nodes** and **links**.

- A node is a computer system with its associated operating system and communication software.
- A node is connected to other nodes by communication links. Messages are sent to other computers over these communication links which may be either physically hardwired connections or modem connections. The link includes the interface cards and cables.

The most significant feature of a network is **resource sharing**. Simply defined, resource sharing means that elements at each node are accessible from other nodes in the network. These elements may include disc files, printers, magnetic tapes, terminals, and other programs. One result of resource sharing is increased efficiency.

Note

The information contained in this manual applies to the HP 9000 Series 300, 400, 600, and 800 computers. Any differences in the installation, configuration, operation, or troubleshooting of these computers are specifically noted.

A Local Area Network (LAN) facilitates information sharing among otherwise separate computers. LAN allows:

- **Communication among computers:** Programs running on separate computers can share data and start and terminate processes.
- **Sharing of software resources:** Information can be accessed reliably and efficiently without shared discs or tapes. Memory-consuming programs that reside on one computer can be shared by all computers, thus eliminating the need for expensive copies.
- **Sharing of hardware resources:** Printers, plotters and other peripheral equipment can be used by all computers on the network.

A Wide Area Network (WAN) facilitates information sharing among otherwise separate computers. WAN allows:

- **Communication among computers:** Programs running on separate computers can share data and start and terminate processes.
- **Transfer of information:** Users can copy files among computers on the network.

Network Architecture

The architecture of NS is based on the seven-layer **Open Systems Interconnection (OSI)** model developed by the International Standards Organization (ISO). This layered design offers a structured, modular approach to the different tasks necessary for transmitting and interpreting data across a network. It is not necessary to know these architectural details to use the high-level services of NS. However, some familiarity with the different tasks performed at the different levels may be helpful.

In the NS network architecture, different transmission and communications tasks are assigned to logically distinct modules called layers or levels. The highest layer regulates user services while the lowest layer regulates the actual transmission of data from one computer to another. At each layer one or more protocols are responsible for carrying out the appropriate tasks. A protocol is a set of rules governing a particular communication task. In a logical sense, the protocol entity at each level communicates with the corresponding protocol entity at the same level on another node. In reality, except for the physical transmission of data to another node, each protocol entity communicates with other protocols at the layers immediately above and below its own.

When a message is sent from one node to another in a network, it is first passed through the architectural levels at the source node. At one of the middle layers, the message is broken down into packets. At the lowest layer, the packets are actually sent across the physical communications link.

The Figure 1-1 shows the seven layers of the OSI model.

OSI MODEL LAYERS

| | |
|---|--------------------|
| 7 | Application Layer |
| 6 | Presentation Layer |
| 5 | Session Layer |
| 4 | Transport Layer |
| 3 | Network Layer |
| 2 | Data Link Layer |
| 1 | Physical Layer |

Figure 1-1. OSI Model

In NS, the Application Layer at the top of the hierarchy corresponds to the following NS User Services: Network File Transfer, and Virtual Terminal to the HP 3000 (VT3K). The next two layers, Presentation and Session, define functions which contribute to these high-level services. However, there is no exact correspondence between NS features and these layers. Network Interprocess Communication, which is a programmatic service provided by the link product, can be considered a function of the Session Layer.

The Transport Layer handles end-to-end communication between a source and a destination node, ensuring that a message from the source arrives at its destination in the proper form. The fragmentation of messages into packets can occur at this level. The Network Layer performs an addressing function, making sure that packets are acquired by the node to which they are addressed. Like the Transport Layer, the fragmentation of messages into packets can occur at this level. The Data Link Layer governs the actual transmission of the packets over the communications link. (At this level the packets are technically known as frames.) The lowest layer, the Physical Layer, provides electrical and mechanical specifications for the transmission of bits across the link.

User Services

User Services describe the user-level services provided by NS, along with Network Interprocess Communication (which is provided by the link products).

- **Network File Transfer (NFT).** NFT allows you to copy files between different nodes in your network interactively or from a command line. This manual documents NFT only between HP 9000 computers. In addition to the HP 9000 computers, the HP 1000, HP 3000 and DEC VAX computers running Network Services support NFT. HP Vectra PCs and IBM PC/ATs running NS-User Services also support NFT. NFT between different types of systems is documented in the *NS Cross-System NFT Reference Manual*.
- **Network Interprocess Communication (NetIPC).** NetIPC consists of a set of programmatic calls that allow processes at different nodes in your network to communicate. NetIPC is fully documented in *NetIPC Programmer's Guide*.
- **Link Level Access (LLA).** LLA provides an alternative to using HP Network Services software. Special purpose network protocols can be implemented by directly accessing the network interface drivers. Link Level Access is fully documented in *LLA Programmer's Guide*.
- **VT3K,** a Network Services application, allows you to log into a remote MPE (HP 3000) host from your local HP-UX host. VT3K works with either MPE V or MPE XL.

Note

Remote File Access (RFA) is no longer part of the NS product. In order to maintain distributed file access, you *must* use NFS Services. For more information, see Appendix B in *Installing and Administering Network Services*.

Node Management Services and Features

In addition to the User Services described in the previous section, NS provides Node Management Services. These services are documented in *Installing and Administering Network Services* and in the link product manuals.

Node Names

Each computer system or node in an NS network has a name. You must specify **node** names when using the *User Services*. Node names at NS nodes have the following syntax:

node[.domain[.organization]]

Domain and *organization* names may be useful for grouping nodes and collections of nodes, but they currently have no special meaning regarding the structure of the network within the NS product. When all three parts of the node name are specified, it is called a *fully-qualified* node name.

Each node, domain, and organization name is a maximum of 16 characters long. The maximum total length of a fully-qualified node name is 50 characters. All alphanumeric characters are allowed, including the underscore (`_`) and dash (`-`) characters, but the first character of each parameter must be alphabetic. Upper and lower case characters are not considered distinct. For example: `ANIMAL.DCL.IND` would indicate node `ANIMAL` in the `DCL` lab (domain) of the `IND` division (organization).

Network File Transfer

Overview

Network File Transfer (NFT) is a service that allows you to copy files between systems in your network. Files are copied using the NFT `dscopy` command.

Using the `dscopy` command you can:

- *Copy files between HP 9000 systems.* Using NFT at your local HP 9000 system, you can copy files to, from, and between other HP 9000 systems in your network.
- *Copy files between unlike systems.* Using NFT at your local HP 9000 systems you can copy files to and from HP 1000 systems, HP 3000 systems, NS for the DEC VAX systems, and HP Vectra PCs or IBM PC/ATs with NS-User Services. You can also copy files between some of these other systems. This manual explains how to use NFT to copy files between HP 9000 systems only; refer to the *NS Cross-System NFT Reference Manual* for detailed information about copying files from one type of computer to another.
- *Copy remote files.* You can copy files from your system to a remote system, from a remote system to your system, and between remote systems. You initiate all copies at your local system, not at the remote system or systems.
- *Translate file attributes.* Translation of file attributes is performed transparently when files are copied between different types of systems. You can also explicitly convert file attributes.
- *Access remote accounts.* You can access files under any account if you provide the correct login name and password.

Note

If any of the computers involved in your file transfer are not HP-UX systems, refer to *NS Cross-System NFT Reference Manual* for additional important information.

NFT Terminology

NFT uses a **three-node model** to copy files between systems. Under the three-node model there are three logical participants in the file copy process:

- **The Initiator.** Located on the system where the copy request originates, the Initiator receives the user request and initiates the copy process.
- **The Producer.** Located on the same node as the *source file*, the Producer accesses that file and produces the data which is to be copied.
- **The Consumer.** Located on the same node as the *target file*, the Consumer consumes the data and writes it into the target file.

In Figure 2-1, the arrows represent data moving from the source file to the target file. If computer A is the initiator in each case, the location of the producer and the consumer depends on the location of the source and target files.

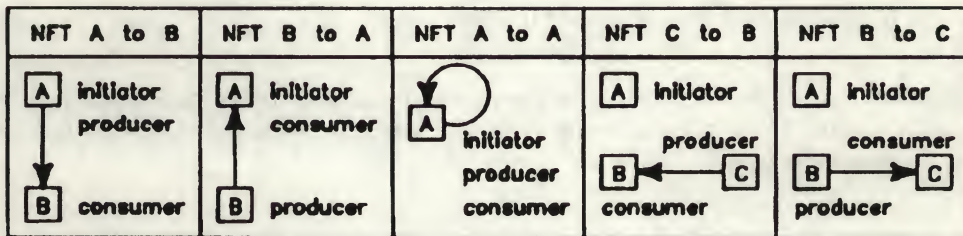


Figure 2-1. Initiator/Producer/Consumer Model

You can get a list of the accessible nodes on the network from your node manager.

File Copying Formats

NFT uses two file copying formats: **Transparent Format** and **Interchange Format**.

Note

The term **HP-UX system** is used in this chapter to refer to HP 9000 computers that have HP-UX operating systems.

Transparent Format

Transparent Format is invoked by default when the source file and the target file nodes have the same type of operating system. Two examples of this are:

- When the source file node is an HP 9000 system and the target file node is an HP 9000 system running HP-UX.
- When the source file and target file nodes are both remote HP 1000 systems and NFT is initiated from the local HP 9000 system.

Transparent Format does not alter a file's attributes, but simply copies the file from one system to another. Use it when you want a low-overhead, maximum-speed file copy between systems of the same type.

Interchange Format

When the source file and the target file nodes are different types of systems (for example, one is an HP 9000 system and one is an HP 1000 A-Series), files copied from one to the other must be converted to Interchange Format. Interchange Format consists of a set of attributes that describe a file in a standard way so that it can be understood by any NS system.

Interchange Format is invoked by default whenever you use NFT to copy a file on one type of system to a system of another type. You can also invoke Interchange Format explicitly by specifying one or more Interchange Format options when copying a file. These options specify how the source file will be read and how it will be stored in the target file. (The Interchange Format options are explained later in this chapter.)

When a file is copied using Interchange Format, it is translated into Interchange Format at the source file node before being copied to the target file node. At the target file node, the file is mapped from Interchange Format into the target file system's file format. Interchange Format's standard file attributes enable the target file computer to map the source file into a target file that has attributes that match the source file's attributes as closely as possible.

You can use the Interchange Format options to give a target file a different set of attributes from those that characterized the source file from which it was copied, even if the file is being copied between computers of the same type.

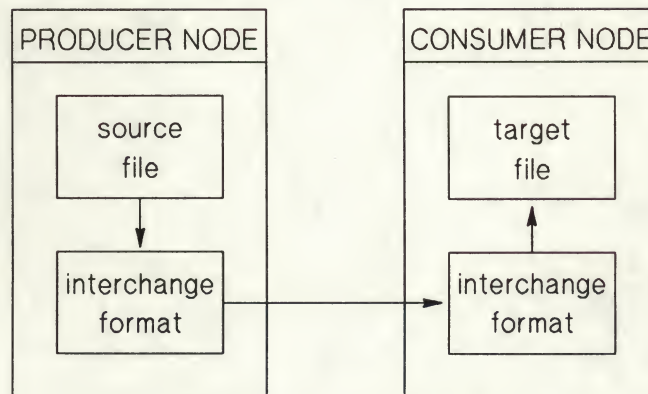


Figure 2-2. Interchange Format

Data Interpretation

Although the purpose of Interchange Format is to create an accessible target file on a system of a different type, it does not ensure that the target file will be usable. This is because Interchange Format changes a file's attributes only; it does not perform data interpretation. Interchange Format can create an unusable target file if the target system has a different representation for the data present in the source file.

For example, if you transfer a data file which contains floating point numbers to a computer with a different type of file system, there is no guarantee that the computer can interpret the representation as the proper floating point number. Be careful when transferring non-ASCII files between heterogeneous computers. The various dscopy options provide different results.

Note

Refer to the *NS Cross-System NFT Reference Manual* for information on copying files between different types of systems.

Using dscopy Command

You can perform NFT by issuing the dscopy command as follows:

dscopy Syntax

```
dscopy    {copydescriptor}  
          {-i}
```

dscopy Parameters

- copydescriptor* A copy descriptor is a string which contains options, the source file and target file node names, logins and the names of the source and target files. (The syntax of *copydescriptor* is below.)
- i Specifies that Interactive Mode should be used. (Interactive Mode is described in detail below.)

dscopy Description

You can issue the dscopy command with either a copy descriptor or the -i option. When you issue the dscopy command with a copy descriptor, the connection established with the target system is terminated after the command is successfully executed.

When you use the dscopy command with the -i option, NFT enters Interactive Mode. When NFT is used in Interactive Mode, dscopy prompts you for copy descriptors until you enter [CTRL]-[D] to indicate end-of-file. (End-of-file is configurable and may be different for your system.) After each copy descriptor is executed, the connection between the source file and target file systems is maintained; you do not need to respecify the node names and logins if subsequent copies are between the same two systems.

If you want to change the source file node or target file node from a remote node to the local node, you can add a prefix of # to the local file name. However, if you want to change the source file node and/or target file node to different remote nodes, you must respecify the node names and logins. Whenever the source file or target file node specifications are changed, NFT terminates the existing connection and establishes a new connection.

Examples of Interactive Mode are provided in “DSCOPY Examples” later in this chapter.

Copy Descriptor Syntax

[option] [option] . . . [[snode#]slogin#]sfile[[tnode#]tlogin#]tfile

Copy Descriptor Parameters

option

Can be one or more dscopy options. If multiple options are specified, they must be separated by a space. Options can be specified in any order. Table 2-1 lists the dscopy options. (Refer to “Dscopy Options” later in this chapter for a complete description of these options.)

Table 2-1. dscopy Options

| Option | Mnemonic | Default |
|-----------------|---------------------------|------------------|
| -A | ASCII | Off |
| -B | Binary | Off |
| -F | Fixed-Length | Off |
| -L <i>[num]</i> | Record Length | 2(31-1) bytes |
| -schar | Search Character | Newline |
| -dchar | Delimiter Character | Newline |
| -p | Print Status | Off |
| -r | Replace | Off |
| -P | Specify File Lock Word | Off |

snode

The name of the source file node. NS node names have the following syntax:

node[.domain[.organization]]

An explanation of NS node names is provided in Chapter 1 of this manual.

Default: You may omit the organization, organization and domain, or all parts of the node name. When the organization, or organization and domain, are omitted, the default is the local organization and/or domain. If the entire node name is omitted, the source node name default is your local node.

slogin

The login and password, if any, at the source node. The login at HP-UX systems must be in the form *userID:password*. The *userID* is the login name for the user account on the computer. The *password* is the password, if any. The colon and *password* need not be specified if no password exists for the login. (*For security reasons, you should avoid creating logins without passwords.*) If the colon is specified but the password is not, the local system will prompt you for the password with the local echo turned off. (*When you supply the password in the command line, you may be revealing it to other users on your system. Keep your password secure by always specifying the colon but not the password.*) The login must be separated from the *snode* and *sfile* parameters by pound signs (#). (Login syntax is different at different NS systems. Refer to the *NS Cross-System NFT Reference Manual* for the login syntax at other NS systems.)

Default: If this parameter is omitted, the source login default is your local login.

sfile

The path name of the source file. If the source file is a local file, and *snode* and *slogin* are not specified, then the path name may start from your current working directory or from the local "root" directory. If the source file is a remote HP-UX file or if *slogin* is specified, the path name may start from the home directory of the login specified in the *slogin* parameter, or from the remote "root" directory. HP-UX path names can be a maximum of 1023 bytes long. NFT does not support the use of HP-UX wild card characters. (File name syntax is different at different NS systems. Refer to the *NS Cross-System NFT Reference Manual* for the file name syntax at other NS systems.)

Note

If Network Services are not installed on your computer, executing a *dscopy* command causes your shell to exit with one or more error messages. If this happens, see your node manager.

tnode

The name of the target file node. NS node names have the following syntax:

node[.domain[.organization]]

An explanation of NS node names is in the Chapter 1 of this manual.

Default: You may omit the organization, organization and domain, or all parts of the node name. When the organization, or organization and domain, are omitted, the default is the local organization and/or domain. If the entire node name is omitted, the target node name default is your local node.

tlogin

The login and password, if any, at the target file node. The login at HP-UX systems must be in the form *userID:password*. The *userID* is the login name for the computer. The *password* is the password, if any. The colon and *password* need not be specified if no password exists for the login. (*For security reasons, you should avoid creating logins without passwords.*) If the colon is specified but *password* is not, the local system will prompt you for the password with the local echo turned off. (*When you supply the password in the command line, you may be revealing it to other users on your system. Keep your password secure by always specifying the colon but not the password.*) The login must be separated from the *tnode* and *tfile* parameters by pound signs (#). (Login syntax is different at different NS systems. Refer to the *NS Cross-System NFT Reference Manual* for the login syntax at other NS systems.)

Default: If this parameter is omitted, the target login default is your local login.

tfile

The path name of the target file. If the target file is a local file and *tnode* and *tlogin* are not specified, then the path name may start from your current working directory or from the local "root" directory. If the target file is a remote HP-UX file or if *tlogin* is specified, the path name may start from the home directory of the login specified in the *tlogin* parameter, or from the remote "root" directory. HP-UX path names can be a maximum of 1023 bytes long. NFT does not support the use of HP-UX wild card characters. (File name syntax is different at different NS systems. Refer to the *NS Cross-System NFT Reference Manual* for the file name syntax at other NS systems.)

dscopy Examples

The following are examples of the dscopy command.

Example 1: A remote HP-UX file is copied to the local HP-UX system. After the first file is copied, another file is copied between the same two nodes. Note that the node name and login parameters for the remote node are needed in each command.

```
dscopy remnode1#logname#/users/lab/sfile /users/testsite/d1file
```

```
dscopy remnode1#logname#/users/lab/nextfile /users/testsite/d2file
```

Example 2: The same files are copied using Interactive Mode. After the first file is copied, the connection is used to copy another file between the same two nodes. Note that the node name and login parameters for the remote node are omitted in the subsequent command.

```
dscopy -i
```

```
dscopy> remnode1#logname#/users/lab/sfile /users/testsite/d1file
```

```
dscopy> /users/lab/nextfile /users/testsite/d2file
```

Example 3: The source file node specification is changed to a different remote HP-UX system while NFT is still in Interactive Mode. The target file node specification is unchanged.

```
dscopy> remnode4#bob#/users/tests/sourcefile /users/testsite/d4file
```

Example 4: The target file node specification is changed to a remote HP-UX system while NFT is still in Interactive Mode.

```
dscopy> /users/tests/source5 remnode5#carol#/users/mgr/tests/lab
```

Example 5: If you want to change the source or target file node from a remote computer to the local computer, you can add a pound sign (#) prefix to the local file name as shown in the following example. This will cause the target file to be created at the local node.

```
dsccopy> /users/lab/sfile #/users/testpool/report/sfile
```

Example 6: To terminate Interactive Mode NFT, type [CTRL]-[D]. (The end-of-file character is configurable and may be different for your system.)

```
dsccopy> [CTRL]-[D]
```

Security

File Protection

The file mode assigned to a newly created file is the same as that of the source file if the source file and target file nodes are both HP-UX systems. The ownership of the new file is set to the target file node login name you supply. If the target file already exists and is write protected for the target file node login name, dscopy will return the following error message:

```
dscopy: unable to access target file/device
```

You must use the replace option (-r) to write to the file.

Password Security

Your local HP-UX system will prompt for passwords with the local echo turned off for HP-UX logins if you enter the login name and a colon, but do not enter the password. The system recognizes the colon as a key to prompt you for the password. The login name and the password are then passed to the remote HP-UX computer as two separate entities.

Note

Security is different at different NS systems. Refer to the *NS Cross-System NFT Reference Manual* for security information if the source or target file node is another type of NS system.

For C2 Security refer to *A Beginner's Guide to HP-UX*, *A Beginner's Guide to Using Shells*, and *HP-UX System Security*.

The following example shows a file being copied from your local HP-UX system to a remote HP-UX system. Note that the single colon is the key for the system to prompt for the password. (Although the password is displayed in this example, it would not be echoed to the screen.)

```
dscopy localfile remnode#cathy:#newfile
```

```
target password 1> notebook
```

When copying to an HP 3000 computer, you can specify a file lock word by using the “-p” option and two colons “::” at the appropriate place in the file specifier.

Using Escape Characters

An escape character is a designated character that tells your system to interpret a specific character literally rather than by its designated system meaning. Precede a special character with a backslash (\) or enclose it in quotation marks to “escape” its special system meaning. You must use an escape with any character that might otherwise be taken literally.

When you are not using `dscopy` in Interactive Mode, you must use an escape for the command characters listed in Table 2-2, if they are to be interpreted literally.

| Table 2-2. Characters That Require an Escape | | |
|--|---|----|
| ? | & | * |
| ; | (|) |
| \ | | \$ |
| “ | , | |

When you use `dscopy` in Interactive Mode, you need only need to escape the pound sign (#) and backslash (\) characters.

When NFT is in both Interactive Mode and non-Interactive Mode, the pound sign (#) character is a special case because it is part of the copy descriptor file name syntax. If you must use the pound sign character as part of a file path name, follow these rules:

- In a non-Interactive Mode `dscopy` operation, you must escape the pound sign character twice. (For example, `\\#`.)
- In an Interactive Mode `dscopy` operation, you must escape the pound sign character only once. (For example, `\#`.)

HP-UX Signals

The HP-UX quit signal terminates any file transfer in progress. [CTRL]-[\\] invokes quit. (The character used to invoke the quit signal is configurable and may be different for your system.) If quit terminates a dscopy operation before it has completed, the target file will be removed.

The interrupt signal causes the system to produce a value that indicates the percentage of the file that was copied at the time that the interrupt occurred. The value is sent to the standard output device. The [BREAK] key or [CTRL]-[C] invokes interrupt. (The control character used to invoke the interrupt signal is configurable and may be different on your system.)

When you enter [BREAK] while a dscopy command is being processed, the system responds with:

```
xx% of current file transferred
```

Note

The interrupt or quit signals are occasionally ignored during connection set up activity. If this occurs, re-enter the signal.

[BREAK] only works when brk int is set. Refer to *stty(1)* in the *HP-UX Reference*.

Errors

In addition to the error messages supplied to stderr, the exit status values are returned to \$status (/bin/csh, C-Shell) or \$? (/bin/sh, Bourne shell or /bin/ksh, Korn shell). Table 2-3 lists the exit status values.

| Table 2-3. Exit Status for Dscopy | |
|-----------------------------------|---|
| Value | Meaning |
| 0 | requested transfer completed successfully |
| 1 | source file or source file node is inaccessible |
| 2 | target file or target file node is inaccessible |
| 3 | syntax error |
| 4 | transfer began, but did not complete successfully |
| 5 | internal error |

dscopy Options

NFT provides eight different options that may be used with the `dscopy` command. These options are part of the copy descriptor (*option* parameter) and precede the file and node specifications. (Refer to the copy descriptor syntax diagram for syntax information.)

The `dscopy` options can be divided into two categories:

- **Format-Independent Options.** These options do not invoke either Interchange Format or Transparent Format. They can be used when a file is copied in either format and do not affect the attributes of the target file.
- **Interchange Format Options.** These options invoke Interchange Format and allow you to give a target file a different set of attributes from those that characterized the source file from which it was copied.

Although the Interchange Format options can be used when copying files between HP-UX systems, their primary and most useful purpose is for copying files between unlike systems. Using an Interchange Format option when copying a file between HP-UX systems overrides the default file copying format (Transparent Format) and causes the file to be copied in Interchange Format.

Table 2-4 describes how the Format-Independent options operate when the source file and target file nodes are both HP-UX systems. Refer to the *NS Cross-System NFT Reference Manual* for information on the operation of these options in regard to other NS systems.

| Table 2-4 . Format-Independent Options | |
|--|---|
| Option | Description |
| -p | <p>The Print Status option causes the status of the dscopy command to be printed to the standard output file. If the -p option is not used, the status is not printed to the standard output file.</p> <p>In the following example, the -p option is used to print the result of a dscopy command. The status will be printed to the standard output file.</p> <pre> dscopy -p storyfile remnode1#john:boxer#text/story 100 bytes transferred for the source target pair: storyfile >> text/story </pre> <p>If the interchange mode is used, the system responds with the number of records transferred instead of the number of bytes.</p> |

Table 2-4 . Format-Independent Options

| Option | Description |
|--------|--|
| -r | <p>The <i>replace</i> option causes an existing target file to be replaced by the source file. This option operates differently depending on the source file and target file node configuration.</p> <p>If both the source and the target computer are HP-UX systems, the target file gets the file mode of the source file and the ownership of the target file node login name you supply. For example, assume the file <code>sample.txt</code> exists on both your local producer node and the remote consumer node. On your local node, it has the mode <code>-rw-rw---</code> and is owned by <code>pam</code> in the group <code>users</code>. On the remote node, it has the mode <code>-rwxrwxrwx</code> and is owned by <code>joe</code> in the group <code>other</code>. If you executed</p> <pre>dscopy -r sample.txt remnode1#marie:#sample.txt</pre> <p>the remote target file <code>sample.txt</code> would now have the mode <code>-rw-rw---</code> and the ownership <code>marie</code> in the group <code>guest</code> (assuming the remote login name <code>marie</code> is in the group <code>guest</code>).</p> <p>If the source file node is an HP-UX system and target computer is a non-HP-UX system, the target file receives the default file protection and/or ownership of the target logon.</p> <p>If the source file node is a non-HP-UX system and the target file node is an HP-UX system, the target file acquires the file mode <code>666</code> (<code>-rw-rw-rw-</code>).</p> <p>If both the source file and target file nodes are non-HP-UX systems, the target file receives the default file protection of the target logon.</p> <p>If the <code>-r</code> option is not used and target file already exists and is an HP-UX file, it is automatically overwritten by the source file (unless the target file is write protected for the target node login), and the target file retains the ownership and file mode of the overwritten file.</p> <p>If the <code>-r</code> option is not used and target file already exists and is a non-HP-UX file, the target file is not overwritten, and an error is returned.</p> |

Table 2-4 . Format-Independent Options

| Option | Description |
|--------|--|
| -P | <p>Give file lock words when talking to an HP 3000 computer.</p> <p>For those file systems that allow individual file lockwords (passwords), the -P option provides password security. As with login passwords, a key must be used in the file name argument. Enter two colons in place of the file lockword and include the -P option, and the system prompts you for the password with the local echo turned off. If a double colon key is used for a file password and -P is not specified, the key is interpreted as part of the file name.</p> <p><i>Example:</i> The file named testfile requires a lockword, which is yellow.</p> <pre> Enter: dscopy -P local_file rem_node1#john/:::lab/:::#testfile/:: Prompt: target password 1> Enter: collie (not echoed to the screen) Prompt: target password 2> Enter: setter (not echoed to the screen) Prompt: target file password> Enter: yellow (not echoed to the screen) </pre> <p>This option is valid only if the file system of at least one computer involved in the transfer supports file lockwords (for example, the HP 3000). Otherwise, the option is ignored.</p> <p>This option causes problems with access from VAX computers. Refer to the <i>NS Cross-System NFT Reference Manual</i> for details.</p> |

NFT and the HP-UX File Type

On HP 9000 computers, the only file type is a stream of bytes. An ASCII file is stored as a stream of bytes with LINEFEED characters to delimit variable-length records.

Records can be interpreted in different ways. Some dscopy options allow you to specify how the source file is read and how it is stored in the target file. This section describes each of these options and the type of results obtained by using them.

The terms **ASCII** and **binary** refer to the **contents** of a file, that is, ASCII or binary data. The terms **fixed** and **variable** refer to the **structure** of a file — that is, fixed-length or variable-length records. HP-UX itself does not care about these distinctions. However, it is convenient to use these terms because some other file systems and most applications impose these concepts on files.

Table 2-5 describes how the Interchange Format options operate when the source file and target file nodes are both HP-UX systems. Refer to *NS Cross-System NFT Reference Manual* for information on the operation of these options in regard to other NS systems.

Table 2-5. Interchange Format Options

| Option | Description |
|--------|--|
| -A | The ASCII option is intended to be used when copying files between unlike systems. It is not useful when used to copy files between HP-UX systems. Refer to <i>NS Cross-System NFT Reference Manual</i> for more information. <i>Default:</i> = off |
| -B | The Binary option is not useful when copying files between HP-UX systems unless it is used in conjunction with other Interchange Format options. (See the descriptions of the Fixed-Length and Record Length (-L) options for more information.) |
| -F | The Fixed-Length option causes “records” in an HP-UX ASCII source file to be converted to fixed-length “records” in an HP-UX target file. (The Fixed-Length option considers an HP-UX “record” to be the data found between ASCII LF characters.) When the Fixed-Length option is specified, data between ASCII LF characters in the ASCII source file is truncated or padded with ASCII SPACE characters, if necessary, so that the data is <i>num</i> bytes long. (You can set <i>num</i> with -L option. The default is 160 bytes.) |
| -F-B | If the Binary (-B) option is used in conjunction with the Fixed-Length option, source file data is divided into “records” every <i>num</i> bytes. ASCII LF characters found in the source file are considered part of the data. If the last “record” is less than <i>num</i> bytes, it is padded with ASCII NUL characters. (You can set <i>num</i> with -L option. The default is 256 bytes.) |

Table 2-5. Interchange Format Options

| Option | Description |
|---------------|--|
| -dchar | <p>The Delimiter Character option allows you to specify a delimiter character to be inserted after each “record” in the target file. (When the Delimiter Character option is not specified, ASCII LF characters are used as delimiters.) The <i>char</i> argument is the delimiter character in its literal form or in its equivalent decimal ASCII value. The ASCII value must be prefixed by a zero. The <i>char</i> argument is required.</p> <p><i>Example:</i> The file <code>testfile1</code> contains LINEFEED delimiters, represented by the <code>L</code> character as shown below.</p> <pre> this isL a test fileL for use in dscopy examples.L </pre> <p>To insert @ characters as record delimiters, instead of the LINEFEED characters, execute the following:</p> <pre> Enter: dscopy -d@ testfile1 hpux2#mike:#testfile2 Prompt: target password > Enter: mypass (not echoed to the screen) </pre> <p>On the system <code>hpux2</code>, the file <code>testfile2</code> now contains the following:</p> <pre> this is@a test file@for use in dscopy examples.@ </pre> <p>Use of this option forces the transfer to occur in interchange mode. The <code>-d</code> option is ignored if specified for an HP 3000 consumer.</p> <p>The <code>-d</code> option is valid <i>only</i> if the target file is a stream-type file. This includes all HP-UX files and certain types of files on other computers.</p> |

Table 2-5. Interchange Format Options

| Option | Description |
|--------|---|
| -schar | <p>The Search Character option allows you to specify a character to be recognized by NFT as a delimiter character. (When the Delimiter Character option is not specified, ASCII LF characters are interpreted as delimiters.) The <i>char</i> argument is the search character in its literal form or in its equivalent decimal ASCII value. The ASCII value must be prefixed by a zero. The <i>char</i> argument is required.</p> <p><i>Example:</i> Testfile2 contains:</p> <pre> this is@a test file@for use in dscopy examples.@ </pre> <p>To create a file in the local directory that replaces the @ character from testfile2 with linefeed delimiters represented with L, execute the following commands:</p> <p><i>Enter:</i> dscopy -s@ hpux2#mike:#testfile2 testfile3 <i>Prompt:</i> source password > <i>Enter:</i> mypass (not echoed to the screen)</p> <p>The file testfile3 now contains:</p> <pre> this isL a test fileL for use in dscopy examples.L </pre> <p>Some example search characters are:</p> <p><i>Character:</i> -s012 <i>Result:</i> Creates a new logical record every time a form feed (ASCII value 012) is encountered.</p> <p><i>Character:</i> -s\\$ <i>Result:</i> Creates a new logical record every time a "\$" is encountered. Note that the "\$" must be escaped to have literal meaning. The "\$" is escaped in the command line, not the file. (See the "Using Escape Characters" section.)</p> <p><i>NOTE:</i> Use of this option forces the transfer to occur in interchange mode. The -s option is valid only if the source file is an HP-UX file.</p> |

Table 2-5. Interchange Format Options

| Option | Description |
|---------|---|
| -L[num] | <p>This option forces an interchange mode transfer and sets a maximum record length. The number specified immediately after -L is the new maximum record length in bytes.</p> <p><i>Example:</i> To transfer the file testfile1 which contains:</p> <pre> this isL a test fileL for use in dscopy examples.L </pre> <p>with a specified record length of 10 characters, enter the following:</p> <p><i>Enter:</i> dscopy -L10 testfile1 hpux2#mike:#testfile2 testfile4 <i>Prompt:</i> target password <i>Enter:</i> mypass (not echoed to the screen)</p> <p>The -L10 option forces the producer to truncate the last two records of testfile1 to 10 characters. The file testfile4 on the node hpux2 now contains:</p> <pre> this isL a test fill for use inL </pre> <p>If -L is specified with no value, the default length is 160 bytes. A warning is sent to stderr if records are being truncated during a transfer. If the -L option is not used, the default record length is producer-consumer dependent. Truncation depends on the maximum record length, which is usually determined by the source file's maximum record length.</p> <p>In a variable record file transfer, the -L value specified is the maximum possible record length. In a fixed record file transfer, the -L value specified is the forced record length and can result in truncation or padding.</p> |

Table 2-5. Interchange Format Options

| Option | Description |
|--------------------|---|
| -L[num] (cont.) | If a value of 0 is entered for the maximum record length, the result is not an empty file on the target computer. The system uses the default value as determined by the producer. For HP 9000 computers, the default is 160 bytes for ASCII file transfers and 256 bytes for binary file transfers. Other producers use other values; see the <i>NS Cross-System NFT Reference Manual</i> for details. |
| -L[num]-B | If the Binary (-B) option is used in conjunction with the Record Length option, the source file is divided into "records" every <i>num</i> bytes, ASCII LF characters found in the source file are considered part of the data, and no truncation occurs. |
| -L[num]-F | <p>You can use the Fixed-Length option with the Record Length option to produce a target file with fixed-length "records" that are <i>num</i> bytes long. The data between ASCII LF characters in the source file is truncated or padded with ASCII SPACE characters, if necessary, so that it is <i>num</i> bytes long.</p> <p>In the format:</p> <pre>dscopy -F -L20 source target</pre> <p>The end of a record is recognized by the LINEFEED terminator. The -L option limits records to 20 bytes (20 ASCII characters). Records are truncated or padded as necessary.</p> <p>An example of the target file after execution of this command, should look like:</p> <pre>He drove his red spel From dawn to sunset L He never slept.SSSSL</pre> <p>The first two records have been truncated to 20 characters. The third record has been padded with SPACE characters because the source record is shorter than 20 characters. The record delimiter characters have been inserted as the last character in each record.</p> |

Table 2-5. Interchange Format Options

| Option | Description |
|-------------|---|
| -L[num]-B-F | <p>If the Record Length option is specified in conjunction with both the Binary and Fixed options, the source file is divided into “records” every <i>num</i> bytes, ASCII LF characters are considered part of the data, and the last “record” in the target file is padded with ASCII NUL characters if it is less than <i>num</i> bytes long.</p> <p>The source file contains 116 characters, including LINEFEED characters.</p> <p>In the format:</p> <pre>dsccopy -F -L20 -B source target</pre> <p>The combination of the -F and -L20 options indicate the target file should contain records which are 20 characters in length. The -B option indicates all characters (including LINEFEED characters) should be transferred as data. Because the last record is less than 20 bytes long, it is padded with NULL characters.</p> <pre>He drove his red speedster a thousand miles.L From dawn to sunset to dawn again he drove, on and on.L He never slept.LNNNN</pre> <p>The file is transferred as six 20-byte records, with the sixth record padded with NULL characters to meet the fixed record length.</p> |

[Faint, illegible text, likely bleed-through from the reverse side of the page]

Logging into an HP 3000 with VT3K

Overview

VT3K, a Network Services application, allows you to log into a remote MPE (HP 3000) host from your local HP-UX host. VT3K works with either MPE V or MPE XL.

Before using VT3K, prepare the system as follows:

- Ensure that your HP 9000 and HP 3000 are on the same network, and that they are properly configured for NS.

NS Configuration Indicator: If dscopy works between your HP 9000 and HP 3000 systems, then the systems are configured for NS. For more information, refer to *Installing and Administering Network Services*.

- Ensure that the NS Virtual Terminal Services are running on the remote HP 3000.

Note VT3K only supports V+ applications.

Terminals You Can Use with VT3K

VT3K is supported on the following configurations:

- HP 2392 or HP 700/92 terminal connected via RS-232 to an HP 9000 Series 600/800.
- HP 9000 Series 300/400 workstation running HPTERM.

Hpterm (HP-UX 7.0 or later) offers HP Block Mode terminal emulation if you use X-Windows on a Series 300/400 workstation.

Using VT3K

Using VT3K involves the following steps:

- Invoking VT3K, and providing the name of a remote HP 3000.
- Logging into the remote host.

After logging in, you can use VT3K to do work on the remote MPE system as if your terminal or workstation window is physically connected to that HP 3000.

Invoking VT3K

At your HP-UX prompt, enter:

```
$ vt3k remote_host
```

The system responds:

To suspend to vt3k command mode press 'Break' 3 times in a 1 second period.

Note

The values "3" and "1" are defaults. You can set them to whatever you wish. See the section, "Changing Break Count and Timing Values."

For *MPE V*, vt3k displays the prompt:

:

For *MPE XL*, vt3k displays the prompt:

MPE XL:

Logging into the Remote Host

Log into the remote HP 3000 as you normally would by supplying a valid login name and a password (if one is required). You must supply vt3k with a valid login name and password (if required) in order to log in to the remote HP 3000.

If the login name and password you supplied are valid on the remote HP 3000, the remote host logs you in and displays its login message and its prompt. You may now work on the MPE system as though you were logged on directly.

If you do not receive an MPE login prompt or you are unable to log into the HP 3000, go to the section, "Responding to Unexpected Results when Using vt3k."

Responding to Unexpected Results when Using vt3k

Although many vt3k errors are reported with NetIPC error codes, vt3k also uses its own termination codes.

NetIPC Errors

The most common NetIPC error is "NSR_NO_NODE (40) node does not exist." This error may stem from one of the following conditions:

- Remote HP 3000 is not up.
- Node name is incorrect.
- Remote node is on a different network.
- Remote node is running an incorrect version of MPE.
- Remote node is not listed on the local network routing tables.

For a complete list of error codes and corrective actions, refer to the *NetIPC Programmer's Guide*.

Descriptions for Terminating vt3k Codes

Table 3-1 defines each of the vt3k termination codes:

| Table 3-1. Termination Codes for vt3k | |
|---------------------------------------|---|
| Codes | Description |
| Connection Terminated [0] | Result of a normal logoff. |
| Connection Terminated [1] | Indicates that someone has issued an ABORTJOB on the MPE session. |
| Connection Terminated [2] | Indicates that the network has shut down. |
| Connection Terminated [8] | Indicates that the remote MPE host has no vt ports available. |

Exiting VT3K

Three situations for exiting VT3K are:

- Logging out of the remote HP 3000.
- Returning to HP-UX from the MPE login prompt.
- Aborting and suspending VT3K.

Logging Out of the Remote HP 3000

At your MPE system prompt, enter:

```
bye
```

vt3k logs you out of the remote host, disconnects you from the remote host, returns you to HP-UX on your local host, and displays the following:

```
Connection Terminated [0]  
$
```

Returning to HP-UX from the MPE Login Prompt

At times, you may mistakenly invoke vt3k on the wrong HP 3000 or on an HP 3000 that you do not have an account. To terminate your connection to that HP 3000, enter the appropriate (MPE V or MPE XL) command at the MPE login prompt.

Example Entry on MPE V:

: :eof:

(Enter both colons.)

Example Entry on MPE XL:

MPE XL: bye

You are returned to your local HP-UX system and the following message is displayed:

Connection Terminated [0]

\$

Aborting and Suspending VT3K

VT3K has an escape mode that allows you to completely exit a VT3K session. In addition, it is possible to suspend to the local HP-UX system from this command mode using normal HP-UX job control.

Activating VT3K Escape Command Mode

To activate the VT3K escape command mode, press [Break] times in 1 second.

| | |
|-------------|--|
| Note | The values “3” and “1” are defaults. You can set them to whatever you wish. See the section, “Changing Break Count and Timing Values.” |
|-------------|--|

Successful entry into the VT3K command mode is indicated by the following system response:

Please enter vt3k command (Exit or Continue):

Do one of the following:

- If you want to abort vt3k, go to the next section, “Aborting VT3K.”
- If you want to suspend vt3k, go to the section, “Suspending VT3K.”
- If you want to go back into the vt3k session, go to the section, “Continuing VT3K.”

Aborting VT3K

Once you have entered the VT3K escape command mode, enter “Exit” or e to terminate your vt3k session:

Please enter vt3k command (Exit or Continue): **e**

You are returned to the HP-UX shell prompt.

3-8 Exiting VT3K

Suspending VT3K

Once you have entered the VT3K escape command mode, you can suspend VT3K to return to your local HP-UX system using job control.

Job control allows you to temporarily return to the original local HP-UX shell from which you invoked `vt3k`. This shell retains the environment you had set up, any background jobs you left running, and any jobs you left suspended when you invoked `vt3k`. Job control is available if you use `cs`h or `ks`h, and lets you work on your local host for as long as you need to before you return to `vt3k`. For more information about job control, see *cs*h(1) and *ks*h(1) in the *HP-UX Reference*.

In the steps that follow, you can suspend the VT3K session, enter HP-UX commands on your local host, and return to the VT3K session.

1. Enter `[Ctrl]-[z]` at your escape command mode prompt:

Please enter vt3k command (Exit or Continue): `[Ctrl]-[z]`

You return to the original local HP-UX shell from which you invoked `vt3k`, and your local host displays:

`[job_number] + Stopped vt3k remote_host`

2. Enter your HP-UX commands. Your original local shell executes each command that you enter.
3. When you want to return to the remote host by resuming your VT3K session, at your local HP-UX prompt, enter:

`jobs`

This lists the jobs you have running in the background.

4. Note the job number associated with your suspended VT3K session.
5. At your local HP-UX prompt, enter:

`fg %vt3k_job_number`

For example, if you enter:

`fg %3`

Your VT3K session is placed in the foreground and your local host displays:

`vt3k remote_host`

Note

If the vt3k job was listed with a plus sign (+) following the job number, you can just enter `fg` at your local HP-UX prompt.

If you have only one VT3K session running, you can enter `fg %vt3k`.

Your VT3K session resumes, returning you to the vt3k command mode.

Continuing VT3K

If you are in the VT3K escape command mode or if you are returning from a suspended session, and you wish to return to the HP 3000, enter "Continue" or `c` at the escape command mode prompt.

Please enter vt3k command (Exit or Continue): `c`

This sends a system break to the HP 3000 then returns you to the remote host.

Using Input Files With VT3K

Input files may be used with VT3K to automate login and other processes.

Protecting Your VT3K Input Files

Because VT3K input files contain login information to your remote HP 3000, you should use a method for protecting your input files.

In order to prevent unauthorized users from obtaining your HP 3000 login information, you must protect your VT3K input files and your input file directory. You should have sole access for reading or writing to your VT3K input files. To accomplish this unique access, perform the following steps:

1. Ensure that your input files are owned by you, the user.
2. Use the HP-UX `chmod` command to protect your input files with 0400 (-r——) permission.
3. Use the HP-UX `chmod` command to protect your input file directory so that no one else can read it or write to it. For example, you should protect your input file directory with at least 0700 (-rwx——) permission.
4. Ensure your HP-UX account has a password.

Using an Input File for Automatic Login and Command Execution

Caution

This file creates a significant security risk because it contains your login and password information.

The automatic login (-a option) causes vt3k to read input from an input file (also known as a script) instead of the standard input. The first line in the input file must be a valid MPE login statement, possibly including the password(s). MPE commands can also be included in the input file. vt3k returns input control to the keyboard after the last command in the file. This is especially useful for an “automated” HP 3000 login and application invocation. In addition, the last line in the input file may be an MPE BYE command.

Note

Only MPE commands can be placed in an input file. You cannot use VT3K input files for providing keystroke input to MPE applications.

Example

You have an input file named *myloginfile* containing the following statements:

```
hello user/passwd.acct/passwd
listf
hpdesk
```

When you enter:

```
vt3k -a myloginfile remote_host
```

vt3k logs into the remote system, issues a LISTF command, and invokes HPDesk. Input control is returned to you, allowing you to log into HPDesk.

Using an Input File for Automatic Execution

Caution This file creates a significant security risk because it contains your login and password information.

The automatic execution (-I option) causes vt3k to read input from an input file instead of the standard input. It does the same thing as the -a option previously described, except it terminates the connection to the HP 3000 at the end of the input file, whether or not an MPE BYE command exists.

Note The -a and -I options cannot be used together.

Example

You have an input file named *myexecfile* containing the following statements:

```
hello user/passwd.acct/passwd
showjob
```

When you enter:

```
vt3k -I myexecfile remote_host
```

vt3k logs into the remote host and issues a SHOWJOB command. The connection to the HP 3000 terminates, and you are returned to the local HP-UX system.

Logging Input and Output to a File

VT3K allows you to log its input and/or output to a file with the command line options in Table 3-2.

| Table 3-2. Options for Logging Input and Output to a File | |
|---|--|
| Option | Description |
| -li (logging input) | Causes vt3k to log all input to the file which is defined by the -f option. |
| -lo (logging output) | Causes vt3k to log all output to the file which is defined by the -f option. |
| -f (filename) | Causes logging set by the above options to be routed to <i>filename</i> . If logging is enabled and this option is not given, logging will go to stdout. |
| -lio (logging input and output) | Causes combination of -li and -lo options. |

Example

If you enter:

```
vt3k -li -f transcript_file remote_host
```

All input to vt3k will be logged to the file *transcript_file*.

Enabling Typeahead

VT3K incorporates typeahead, but not by default. Typeahead provides the user with keyboard input buffering. To enable typeahead, use the `-t` option.

Caution Some MPE applications do not run correctly with typeahead enabled.

Example

If you enter:

```
vt3k -t remote_host
```

vt3k will process keyboard input with typeahead buffering.

Changing Break Count and Timing Values

To enter the VT3K escape command mode, you press [Break] a set number of times within a set time period. The default values for these parameters are 3 for the break count and 1 for the seconds that you need to complete the break count.

To change the break count, use the -B option followed by the number of times you want to press [Break] to activate the escape command mode. To change the timing, use the -T option followed by the seconds that you need to complete the break count.

For example, to change the break count to 5 and the timing to 2, you enter:

```
vt3k -B 5 -T 2
```

If you press [Break] a different number of times within the set time, a system break is sent to the HP 3000 and vt3k starts counting breaks over again.

For example, if 6 breaks are sent in 1 second, vt3k sends the HP 3000 a system break and stops the timer from looking for escape command breaks. If only 1 break is received when the timer elapses, vt3k sends the HP 3000 a system break and stops counting the breaks received.

ASCII Character Set

| ASCII Char | EQUIVALENT FORMS | | | | HP-IB |
|------------|------------------|----------|-----|-----|-------|
| | Dec | Binary | Oct | Hex | |
| NUL | 0 | 00000000 | 000 | 00 | |
| SOH | 1 | 00000001 | 001 | 01 | GTL |
| STX | 2 | 00000010 | 002 | 02 | |
| ETX | 3 | 00000011 | 033 | 03 | |
| EOT | 4 | 00000100 | 004 | 04 | SDC |
| ENQ | 5 | 00000101 | 005 | 05 | PPC |
| ACK | 6 | 00000110 | 006 | 06 | |
| BEL | 7 | 00000111 | 007 | 07 | |
| BS | 8 | 00001000 | 010 | 08 | GET |
| HT | 9 | 00001001 | 011 | 09 | TCT |
| LF | 10 | 00001010 | 012 | 0A | |
| VT | 11 | 00001011 | 013 | 0B | |
| FF | 12 | 00001100 | 014 | 0C | |
| CR | 13 | 00001101 | 015 | 0D | |
| SO | 14 | 00001110 | 016 | 0E | |
| SI | 15 | 00001111 | 017 | 0F | |
| DLE | 16 | 00010000 | 020 | 10 | |
| DC1 | 17 | 00010001 | 021 | 11 | LLO |
| DC2 | 18 | 00010010 | 022 | 12 | |
| DC3 | 19 | 00010011 | 023 | 13 | |
| DC4 | 20 | 00010100 | 024 | 14 | DCL |
| NAK | 21 | 00010101 | 025 | 15 | PPU |
| SYNC | 22 | 00010110 | 026 | 16 | |
| ETB | 23 | 00010111 | 027 | 17 | |
| CAN | 24 | 00011000 | 030 | 18 | SPE |
| EM | 25 | 00011001 | 031 | 19 | SPD |
| SUB | 26 | 00011010 | 032 | 1A | |

| ASCII Char | EQUIVALENT FORMS | | | | HP-IB |
|------------|------------------|----------|-----|-----|-------|
| | Dec | Binary | Oct | Hex | |
| ESC | 27 | 00011011 | 033 | 1B | |
| FS | 28 | 00011100 | 034 | 1C | |
| GS | 29 | 00011101 | 035 | 1D | |
| RS | 30 | 00011110 | 036 | 1E | |
| US | 31 | 00011111 | 037 | 1F | |
| space | 32 | 00100000 | 040 | 20 | LA0 |
| ! | 33 | 00100001 | 041 | 21 | LA1 |
| " | 34 | 00100010 | 042 | 22 | LA2 |
| # | 35 | 00100011 | 043 | 23 | LA3 |
| \$ | 36 | 00100100 | 044 | 24 | LA4 |
| % | 37 | 00100101 | 045 | 25 | LA5 |
| & | 38 | 00100110 | 046 | 26 | LA6 |
| ' | 39 | 00100111 | 047 | 27 | LA7 |
| (| 40 | 00101000 | 050 | 28 | LA8 |
|) | 41 | 00101001 | 051 | 29 | LA9 |
| * | 42 | 00101010 | 052 | 2A | LA10 |
| + | 43 | 00101011 | 053 | 2B | LA11 |
| , | 44 | 00101100 | 054 | 2C | LA12 |
| - | 45 | 00101101 | 055 | 2D | LA13 |
| . | 46 | 00101110 | 056 | 2E | LA14 |
| / | 47 | 00101111 | 057 | 2F | LA15 |
| 0 | 48 | 00110000 | 060 | 30 | LA16 |
| 1 | 49 | 00110001 | 061 | 31 | LA17 |
| 2 | 50 | 00110010 | 062 | 32 | LA18 |
| 3 | 51 | 00110011 | 063 | 33 | LA19 |
| 4 | 52 | 00110100 | 064 | 34 | LA20 |
| 5 | 53 | 00110101 | 065 | 35 | LA21 |

| ASCII Char | EQUIVALENT FORMS | | | | HP-IB |
|---------------|------------------|----------|-----|-----|-------|
| | Dec | Binary | Oct | Hex | |
| 6 | 54 | 00110110 | 066 | 36 | LA22 |
| 7 | 55 | 00110111 | 067 | 37 | LA23 |
| 8 | 56 | 00111000 | 070 | 38 | LA24 |
| 9 | 57 | 00111001 | 071 | 39 | LA25 |
| : | 58 | 00111010 | 072 | 3A | LA26 |
| : | 59 | 00111011 | 073 | 3B | LA27 |
| < | 60 | 00111100 | 074 | 3C | LA28 |
| = | 61 | 00111101 | 075 | 3D | LA29 |
| > | 62 | 00111110 | 076 | 3E | LA30 |
| ? | 63 | 00111111 | 077 | 3F | UNL |
| * | 64 | 01000000 | 100 | 40 | TA0 |
| A | 65 | 01000001 | 101 | 41 | TA1 |
| B | 66 | 01000010 | 102 | 42 | TA2 |
| C | 67 | 01000011 | 103 | 43 | TA3 |
| D | 68 | 01000100 | 104 | 44 | TA4 |
| E | 69 | 01000101 | 105 | 45 | TA5 |
| F | 70 | 01000110 | 106 | 46 | TA6 |
| G | 71 | 01000111 | 107 | 47 | TA7 |
| H | 72 | 01001000 | 110 | 48 | TA8 |
| I | 73 | 01001001 | 111 | 49 | TA9 |
| J | 74 | 01001010 | 112 | 4A | TA10 |
| K | 75 | 01001011 | 113 | 4B | TA11 |
| L | 76 | 01001100 | 114 | 4C | TA12 |
| M | 77 | 01001101 | 115 | 4D | TA13 |
| N | 78 | 01001110 | 116 | 4E | TA14 |
| O | 79 | 01001111 | 117 | 4F | TA15 |
| P | 80 | 01010000 | 120 | 50 | TA16 |
| Q | 81 | 01010001 | 121 | 51 | TA17 |
| R | 82 | 01010010 | 122 | 52 | TA18 |
| S | 83 | 01010011 | 123 | 53 | TA19 |
| T | 84 | 01010100 | 124 | 54 | TA20 |
| U | 85 | 01010101 | 125 | 55 | TA21 |
| V | 86 | 01010110 | 126 | 56 | TA22 |
| W | 87 | 01010111 | 127 | 57 | TA23 |
| X | 88 | 01011000 | 130 | 58 | TA24 |
| Y | 89 | 01011001 | 131 | 59 | TA25 |
| Z | 90 | 01011010 | 132 | 5A | TA26 |

| ASCII Char | EQUIVALENT FORMS | | | | HP-IB |
|---------------|------------------|----------|-----|-----|-------|
| | Dec | Binary | Oct | Hex | |
| [| 91 | 01011011 | 133 | 5B | TA27 |
| \ | 92 | 01011100 | 134 | 5C | TA28 |
|] | 93 | 01011101 | 135 | 5D | TA29 |
| ^ | 94 | 01011110 | 136 | 5E | TA30 |
| _ | 95 | 01011111 | 137 | 5F | UNT |
| ' | 96 | 01100000 | 140 | 60 | SC0 |
| a | 97 | 01100001 | 141 | 61 | SC1 |
| b | 98 | 01100010 | 142 | 62 | SC2 |
| c | 99 | 01100011 | 143 | 63 | SC3 |
| d | 100 | 01100100 | 144 | 64 | SC4 |
| f | 101 | 01100101 | 145 | 66 | SC5 |
| e | 102 | 01100110 | 146 | 66 | SC6 |
| g | 103 | 01100111 | 147 | 67 | SC7 |
| h | 104 | 01101000 | 150 | 68 | SC8 |
| i | 105 | 01101001 | 151 | 69 | SC9 |
| j | 106 | 01101010 | 152 | 6A | SC10 |
| k | 107 | 01101011 | 153 | 6B | SC11 |
| l | 108 | 01101100 | 154 | 6C | SC12 |
| m | 109 | 01101101 | 155 | 6D | SC13 |
| n | 110 | 01101110 | 156 | 6E | SC14 |
| o | 111 | 01101111 | 157 | 6F | SC15 |
| p | 112 | 01110000 | 160 | 70 | SC16 |
| q | 113 | 01110001 | 161 | 71 | SC17 |
| r | 114 | 01110010 | 162 | 72 | SC18 |
| s | 115 | 01110011 | 163 | 73 | SC19 |
| t | 116 | 01110100 | 164 | 74 | SC20 |
| u | 117 | 01110101 | 165 | 75 | SC21 |
| v | 118 | 01110110 | 166 | 76 | SC22 |
| w | 119 | 01110111 | 167 | 77 | SC23 |
| x | 120 | 01111000 | 170 | 78 | SC24 |
| y | 121 | 01111001 | 171 | 79 | SC25 |
| z | 122 | 01111010 | 172 | 7A | SC26 |
| { | 123 | 01111011 | 173 | 7B | SC27 |
| | 124 | 01111100 | 174 | 7C | SC28 |
| } | 125 | 01111101 | 175 | 7D | SC29 |
| ~ | 126 | 01111110 | 176 | 7E | SC30 |
| DEL | 127 | 01111111 | 177 | 7F | SC31 |

A-2 ASCII Character Set

Error Messages

Overview

This appendix lists and describes the error messages that can be produced by User Services. These NS error messages are divided into the following categories:

dscopy error messages These ASCII error messages may be returned by the Network File Transfer program `dscopy`. They are printed to the standard output device.

errno values Some NFT logged errors return `errno` values.

The values for `errno` are not documented in this manual. They are defined in the file `/usr/include/sys/errno.h` and in the *HP-UX Reference* entry for *errno(2)*.

Note

Refer to the link product installation manual for messages logged to the system console. Refer to *Installing and Administering Network Services* and link product installation manual for lists and descriptions of Nodal Management Services error messages.

dscopy Error Messages

The following error messages may be returned by dscopy.

| | |
|----------------|--|
| Message | dscopy: abort request packet send fail |
| Cause | <p>This message is returned when [CTRL]-[\] is used to terminate a file transfer in progress and NFT is unable to signal the producer node to terminate the transfer.</p> <p>The dscopy program will terminate, but the transfer may continue and complete successfully.</p> |
| Action | This is an informational message only. No action is necessary. |
| Message | dscopy: ascii character value out of range |
| Cause | An ASCII value was specified that is less than zero or greater than 255. |
| Action | Specify an ASCII value that is between zero and 255, inclusive, and try again. |
| Message | dscopy: can't set user id |
| Cause | NFT was not installed correctly. |
| Action | Ask the Node Manager to correct the installation. |

| | |
|----------------|---|
| Message | dscopy: connection to source node has gone down |
| Cause | <p>An error was detected on the connection to the node where the source file or files reside. There are two possible reasons:</p> <ul style="list-style-type: none"> ■ If the producer process is still active on the source node, the producer will attempt to carry out the remainder of the user file copy command. ■ If the file producer is no longer active, the remaining files that were to be copied will not be copied. |
| Action | Determine which, if any, of the file or files were not copied. Retry if appropriate. If this error occurs frequently, contact your HP support representative. |

| | |
|----------------|---|
| Message | dscopy: connection to target node has gone down |
| Cause | <p>An error was detected on the connection to the node where the target file is to be created. If both the producer and consumer nodes are HP 1000 computers and this error occurs while the file producer is copying several files, the current file may not have been copied successfully and no attempt will be made to copy the remainder of the files.</p> |
| Action | Determine which, if any, file or files were not copied. Retry if appropriate. Determine which file or files were not copied. Retry if appropriate. If this error occurs frequently, contact your HP support representative. |

| | |
|----------------|--|
| Message | dscopy: delimiter character option specified without delimiter character |
| Cause | The -d option was specified, but the delimiter character was omitted. |
| Action | Specify the delimiter character immediately after the -d option and try again. |

| | |
|----------------|---|
| Message | dscopy: duplicate target file |
| Cause | The target file exists, but the Replace option (-r) was not specified. |
| Action | Verify that the target file name is correct, or specify the Replace option, whichever is appropriate. |

| | |
|----------------|---|
| Message | dscopy: illegal character or concatenated options |
| Cause | An unsupported option was specified or options were concatenated. |
| Action | Check the syntax and try again. |

| | |
|----------------|---|
| Message | dscopy: incorrect source file password |
| Cause | The given source file password was incorrect. |
| Action | Specify the correct source file password and try again. |

| | |
|----------------|---|
| Message | dscopy: incorrect target file password |
| Cause | The given target file password was incorrect. |
| Action | Specify the correct target file password and try again. |

B-4 dscopy Error Messages

| | |
|----------------|--|
| Message | dscopy: initialization of the transfer incomplete: no data sent yet |
| Cause | This message is returned when [CTRL]-[C] is used to obtain status information and the file transfer has not yet begun. |
| Action | This is an informational message only. No action is necessary. |
| <hr/> | |
| Message | dscopy: insufficient resources are available on source node |
| Cause | There are insufficient resources at the producer node to copy the file or files. |
| Action | Verify that there are sufficient resources on the producer node and try again. |
| <hr/> | |
| Message | dscopy: insufficient resources are available on target node |
| Cause | There are insufficient resources at the consumer node to copy the file or files. |
| Action | Verify that there are sufficient resources on the consumer node and try again. |
| <hr/> | |
| Message | dscopy: internal NFT error |
| Cause | An internal NFT error has occurred. |
| Action | Notify your HP support representative. |
| <hr/> | |
| Message | dscopy: invalid or unsupported source device |
| Cause | A request was made to copy a file from a device that NFT does not support for reading. |
| Action | Specify a supported device. |
| <hr/> | |

| | |
|----------------|---|
| Message | dsccopy: invalid or unsupported target device |
| Cause | A request was made to copy a file to a device that NFT does not support for writing. |
| Action | Specify a supported device. |
| <hr/> | |
| Message | dsccopy: invalid source file id |
| Cause | Either the source file path name contained illegal or incorrect characters or had illegal or incorrect syntax, or the path name specified was bad. |
| Action | Make sure the path name specified is correct. |
| <hr/> | |
| Message | dsccopy: invalid target file id |
| Cause | Either the target file path name contained illegal or incorrect characters or had illegal or incorrect syntax, or the path name specified was bad. |
| Action | Make sure the path name specified is correct. |
| <hr/> | |
| Message | dsccopy: maximum input length or number of parameters exceeded |
| Cause | This error is returned when NFT is used in interactive mode and the length of the input line is greater than 800 characters, or the number of arguments is greater than 30. |
| Action | Make sure your line length is less than 800 characters and/or 30 arguments and try again. |
| <hr/> | |
| Message | dsccopy: maximum login or nodename length exceeded |
| Cause | A login or node name exceeded the maximum length allowed. |
| Action | Check syntax and try again. |
| <hr/> | |

B-6 dsccopy Error Messages

| | |
|----------------|---|
| Message | dscopy: maximum pathname length is 1023 characters |
| Cause | The source and target file path names may not exceed 1023 characters. |
| Action | Specify a path name that is 1023 characters or less. |
| Message | dscopy: need password to access source file |
| Cause | The source file could not be accessed without the proper password. |
| Action | Specify the password along with the source file name and try again. |
| Message | dscopy: need password to access target file |
| Cause | The target file could not be accessed without the proper password. |
| Action | Specify the password along with the target file name and try again. |
| Message | dscopy: no response to abort request |
| Cause | This message is returned when [CTRL]-[\] is used to terminate a file transfer in progress and no acknowledgement of the request is received from the producer within 10 seconds. The dscopy program will terminate, but the transfer may or may not continue and complete successfully. |
| Action | This is an informational message only. No action is necessary. |
| Message | dscopy: out of disc space |
| Cause | The consumer node is out of disc space. |
| Action | Free up enough disc space on the consumer node for the target file and try again. |

| | |
|----------------|---|
| Message | dscopy: progress request packet send failed |
| Cause | This message is returned when dscopy is interrupted to obtain status information, and NFT is unable to determine what percentage of the file has been copied. |
| Action | Try again. The transfer may still complete successfully. |
| <hr/> | |
| Message | dscopy: read from source file failed |
| Cause | A file system error occurred when reading from or opening the source file. |
| Action | Verify that the file is accessible with the specified login on the producer node. An internal error may have occurred. |
| <hr/> | |
| Message | dscopy: replace option is not supported |
| Cause | The consumer node does not support the Replace option. |
| Action | This is an informational message only. No action is required. |
| <hr/> | |
| Message | dscopy: requested data type was refused |
| Cause | A binary file transfer was requested for an ASCII file or an ASCII file transfer was requested for a binary file. |
| Action | Include or omit the -B option as necessary. |
| <hr/> | |

B-8 dscopy Error Messages

Message dscopy: requested file size was refused

Cause The file size specified would exceed the space available on the consumer node.

Action Make more space available on the consumer node.

Message dscopy: requested file type was refused

Cause This error is returned if:

- An attempt is made to copy an HP-UX directory.
- An attempt is made to copy a directory file from a non-HP-UX system.

Action These file transfers are not supported.

Message dscopy: requested record size refused

Cause The value specified for maximum record length (-L) was too large, or the producer or consumer node could not accept the interchange file copy request because of buffer space limitations. If the producer or consumer node is an HP 1000 computer, this message may indicate that one of the records in the HP 1000 file is larger than 4400 bytes, or that the user-defined -L value is larger than 4400 bytes.

Action If the producer or consumer node is an HP 1000 computer, specify a record size smaller than 4400 bytes.

| | |
|----------------|--|
| Message | dscopy: requested record type was refused |
| Cause | The user-defined record type was refused. Either an existing target file has a record type different from that requested, or the consumer node does not support files of that record type. |
| Action | Let NFT choose the record type by not specifying a record type option and try again. |

| | |
|----------------|---|
| Message | dscopy: search character option specified without search character |
| Cause | The -s option was specified, but the search character was omitted. |
| Action | Specify the search character immediately after the -s option and try again. |

| | |
|----------------|---|
| Message | dscopy: sending a transient file in interchange mode is not allowed |
| Cause | Transient file storage is not supported. |
| Action | This is an informational message only. No action is required. |

| | |
|----------------|---|
| Message | dscopy: source file was not found |
| Cause | The source file does not exist or the file name, path name or login was incorrectly specified. |
| Action | Verify that the file exists and that the correct file name, login and node name were specified and try again. |

| | |
|----------------|---|
| Message | dscopy: target file was not found |
| Cause | The target file does not exist, or the file name, path name or login was incorrectly specified. |
| Action | Verify that the file exists and that the correct file name, login and node name were specified and try again. |

| | |
|----------------|--|
| Message | dscopy: target record size is invalid |
| Cause | The user-defined record size (-L) value is out of the acceptable range. Files copied to or from an HP 1000 computer may not have records larger than 2200 words. |
| Action | Specify an acceptable record size and try again. |

| | |
|----------------|--|
| Message | dscopy: transfer aborted per user request |
| Cause | A quit signal was sent to the process running NFT after the file transfer had begun. |
| Action | This is an informational message only. No action is required. |

| | |
|----------------|---|
| Message | dscopy: transient storage is not supported |
| Cause | Transient file storage is not supported. |
| Action | This is an informational message only. No action is required. |

| | |
|----------------|--|
| Message | dscopy: unable to access source file/device |
| Cause | <p>If the producer node is an HP 1000 computer, this error indicates that an unexpected file system error occurred in opening or accessing the source file. If the producer node is an HP-UX system, this error may indicate that:</p> <ul style="list-style-type: none"> ■ A protection violation occurred in accessing the source file or the directory it is in. ■ The source file name specifies an unsupported device. ■ The user was unable to search the source directory. |
| Action | Verify that the source file and/or directory exists and is accessible. |
| Message | dscopy: unable to access target file/device |
| Cause | <p>This error message is returned when one or more of the following problems occur:</p> <ul style="list-style-type: none"> ■ The target device does not exist or has failed. ■ The target file does not exist. ■ The user does not have access privileges to the target file or device. ■ The specified directory could not be searched. ■ The user is unable to write to the target file because it is write protected for the specified login. ■ The user is unable to write to the target directory because the Replace option (-r) was specified and the "old" file was removed, thus requiring write access to the directory. |

| | |
|---------------|--|
| Action | <p>The recommended actions are:</p> <ul style="list-style-type: none"> ■ Verify that the target device exists and/or is accessible. ■ Verify that the target file exists. ■ Obtain access privileges to the target file or device. ■ Verify that the target directory exists. ■ Use the Replace option (-r). ■ Obtain write access to the specified directory. |
|---------------|--|

| | |
|----------------|---|
| Message | dscopy: unable to close target file |
| Cause | The target file could not be closed after the transfer was complete. A file system error may have occurred on the consumer node. |
| Action | Verify the state of the file. Refer to the file system error on the consumer node for more information. Retry. This may indicate an internal error. |

| | |
|----------------|---|
| Message | dscopy: unable to connect to source node |
| Cause | <p>A connection could not be established to the node where the source file resides. One or more of the following problems may exist:</p> <ul style="list-style-type: none"> ■ The node name specified is incorrect. ■ The producer node is not connected to the network. ■ The producer node does not have enough memory space available to establish a connection. ■ NFT has not been initialized on the source node. ■ The network is not up. ■ The producer node is incorrectly configured. ■ The initiator node does not have enough memory available to establish a connection. |
| Action | <p>Verify that:</p> <ul style="list-style-type: none"> ■ The producer node name is correct. ■ The producer node is connected to the network. ■ There are sufficient resources to establish a connection. ■ NFT has been initialized on the producer node. |

| | |
|----------------|---|
| Message | dscopy: unable to connect to target node |
| Cause | <p>A connection could not be established to the node where the target file is to reside. One or more of the following problems may exist:</p> <ul style="list-style-type: none"> ■ The node name specified is incorrect. ■ The consumer node is not connected to the network. ■ The consumer node does not have enough memory space available to establish a connection. ■ NFT has not been initialized on the consumer node. ■ The network is not up. ■ The consumer node is incorrectly configured. ■ The producer node's network directory does not contain an entry for the producer node. ■ The producer node does not have enough memory available to establish a connection. |
| Action | <p>Verify that:</p> <ul style="list-style-type: none"> ■ The consumer node name is correct. ■ The consumer node is connected to the network. ■ There are sufficient resources to establish a connection. ■ NFT has been initialized on the consumer node. |

| | |
|----------------|---|
| Message | dscopy: unable to create or open target file |
| Cause | This error may indicate that a file system error occurred while creating or opening the target file, or that the target login does not allow access to the specified target file. |
| Action | Verify that you can access the file and its directory on the consumer node. |

| | |
|----------------|--|
| Message | dscopy: unable to logon to source node |
| Cause | The login string specified is invalid for the producer node. |
| Action | <p>This error may require one of the following actions:</p> <ul style="list-style-type: none"> ■ If an additional error message is returned, refer to it for further information. ■ Check the login string and try again. ■ Provide a different login string and try again. |

Message dscopy: unable to logon to target node

Cause The login string specified is invalid for the consumer node.

Action This error may require one of the following actions:

- If an additional error message is returned, refer to it for further information.
- Check the login string and try again.
- Provide a different login string and try again.

Message dscopy: unable to purge target file

Cause This error may indicate that a file system error occurred when attempting to purge the target file, or that the target login does not allow access to the specified target file.

Action Verify that you can access the file and its directory on the consumer node.

Message dscopy: unable to start NFT service on source node

Cause NFT internal error.

Action Contact the node manager.

Message dscopy: unable to start NFT service on target node

Cause NFT internal error.

Action Contact the node manager.

| | |
|----------------|---|
| Message | dscopy: (warning) can't initialize logging |
| Cause | Logging could not be initialized. |
| Action | Ask the node manager to make sure that logging is correctly installed and operational. |
| <hr/> | |
| Message | dscopy: (warning) invalid characters in target file name were removed |
| Cause | The target file name contained some characters which were invalid for the consumer node, and they were removed from the target file name before it was created. |
| Action | This is an informational message only. No action is necessary. |
| <hr/> | |
| Message | dscopy: (warning) record length unspecified; assumed default = 160 bytes |
| Cause | Because the -L option was not specified, dscopy will create a target file with 160-byte records. |
| Action | This is an informational message only. No action is necessary. |
| <hr/> | |
| Message | dscopy: (warning) record(s) truncated to fit maximum target file record size |
| Cause | At least one source logical record is larger than the maximum size specified. Trailing data in the record beyond the maximum size were truncated. |
| Action | This is an informational message. No action is necessary. |
| <hr/> | |

B-18 dscopy Error Messages

| | |
|----------------|--|
| Message | dsccopy: (warning) source and target file attributes differ |
| Cause | The target file existed before the transfer, and its attributes were not the same as the source file. A set of attributes was chosen and the transfer continued. |
| Action | This is an informational message. No action is necessary. |
| <hr/> | |
| Message | dsccopy: (warning) target file name has been truncated |
| Cause | One of the following problems has occurred: <ul style="list-style-type: none"> ■ The target file was not specified, and the source file name was too long or contained illegal characters. ■ The target file specified was too long or contained illegal characters. ■ Illegal characters were removed and/or the name was truncated. |
| Action | This is an informational message. No action is necessary. |
| <hr/> | |
| Message | dsccopy: write to target file failed |
| Cause | The target file was opened, but a write to it failed. A file system error may have occurred during the transfer. |
| Action | Verify the state of the file. Refer to the file system error on the target node for more information. Retry. This may indicate an internal error. |
| <hr/> | |

1. The first part of the report is a general introduction to the subject.

2. The second part is a detailed description of the methods used in the study.

3. The third part is a discussion of the results of the study.

4. The fourth part is a conclusion and a summary of the findings.

5. The fifth part is a list of references.

6. The sixth part is a list of figures and tables.

7. The seventh part is a list of appendices.

8. The eighth part is a list of footnotes.

9. The ninth part is a list of acknowledgments.

10. The tenth part is a list of the author's address and contact information.

11. The eleventh part is a list of the author's other publications.

12. The twelfth part is a list of the author's other works.

Network Services/HP 9000 Migration

This appendix introduces NS/9000 for users who are current DS/1000-IV, NS/1000 or NS/9000 customers. Because it addresses three different audiences, this appendix is organized into two sections:

- *NS/9000 for DS/1000-IV Users.* This section compares DS/1000-IV and NS/9000.
- *NS/1000 to NS/9000 Migration.* This section compares NS/1000 and NS/9000. In addition, differences between the NFT implementations on the HP 1000 (A-Series) and the HP 9000 are highlighted.

Note

For information on porting NS/1000 applications to LAN/9000 NetIPC, refer to “Porting NetIPC Programs” and “Cross-System NetIPC” sections of *NetIPC Programmer’s Guide*.

NS/9000 for DS/1000-IV Users

NS/9000 and DS/1000-IV do not share any common user services. As a result, programs written using DS/1000-IV calls are not transportable to NS/9000 systems.

To help customers migrate from DS/1000-IV to NS/9000, Hewlett-Packard has developed a utility that reads RTE program source files and flags DS/1000-IV calls. This program can help determine the difficulty of converting a program to use NS/9000 calls and help locate calls that must be modified. For more information about this utility, call your local HP sales office.

Feature Comparison

Table C-1 maps the DS/1000-IV services to NS/9000 services with similar functionality. There is no one-to-one correspondence between DS/1000-IV and NS/9000 services.

| Table C-1. DS/1000-IV vs. NS/9000 | |
|---|---|
| DS/1000-IV Service | Similar NS/9000 Service |
| Distributed Executive (DEXEC) | Not Available |
| Program-to-Program Communication (PTOP) | Network Interprocess Communication (NetIPC) |
| REMAT | Network File Transfer (NFT) |
| RMOTE | Network File Transfer (NFT) |
| Remote File Access (RFA) | Not Available |
| Remote Data Base Access (Image/1000) | Not Available |

Note DS/1000-IV Remote File Access is not available on NS/9000 systems.

The next section compares DS/1000-IV and NS/9000 product features.

C-2 NS/9000 for DS/1000-IV Users

File Transfer

DS/1000-IV provides three different file transfer services:

- The REMAT ST command. This command allows you to copy files to, from and between DS/1000-IV nodes.
- The RMOTE MO command. This command allows you to copy files from your local DS/1000-IV node to a remote DS/3000 node, or from a remote DS/3000 node to your local DS/1000-IV node. You cannot copy files between remote nodes using the MO command.
- The RTE CO command used with DS transparency software. This command copies files to, from and between DS/1000-IV nodes.

NS/9000 provides one file transfer service: NS Network File Transfer (NFT). NFT is an HP AdvanceNet service that is also implemented on HP 1000 (A-Series) computers, HP 9000 computers, HP 3000 computers, DEC VAX computers, HP Vectra PCs and IBM PC/ATs.

Hewlett-Packard supports all combinations of cross-system NFT among the NS/1000, NS/3000, NS/9000, HP Vectra PC, IBM PC/AT (with NS), and DEC VAX (with NS) systems.

The REMAT ST command, DS file transparency CO command and the NFT dscopy command share the following common features:

- All three use the three-node model (i.e., you can copy files from the local node to a remote node, from a remote node to the local node, or from a remote node to another remote node).
- All three include options or parameters that allow you to alter target file characteristics.
- All three services allow you to log in to specific remote accounts. (This feature is also shared by RMOTE.)

Refer to Chapter 2, "Network File Transfer," for information about using NFT to copy files between NS/9000 systems. Refer to the *NS Cross-System NFT Reference Manual* for information about copying files between different types of NS systems.

Interprocess Communication

The DS/1000-IV service Program-to-Program Communication (PTOP) allows a master program to exchange information with and control the execution of a slave program. PTOp calls are divided into two categories, master calls and slave calls. The master and the slave programs may be located at the local node, or one may be at the local node and the other may be at a remote node. DS/1000-IV PTOp programs can communicate with other PTOp programs on remote DS/1000-IV or DS/3000 nodes.

LAN/9000 provides a service similar to PTOp called Network Interprocess Communication (NetIPC). NetIPC allows two or more peer processes to exchange information; one program does not control the execution of another. Because NetIPC operates in a peer-to-peer rather than master-to-slave fashion, any NetIPC process can use any of the NetIPC calls. As a result, the form of interprocess communication offered by NetIPC is more flexible than that provided by PTOp. NetIPC peer processes may be located on the same or different nodes.

NetIPC processes establish connections with other processes via sockets. A NetIPC process can engage in a dialogue that references certain sockets in order to create a connection with another NetIPC process. Several NetIPC calls are provided to allow processes to engage in this dialogue. Once a connection, called a virtual circuit, is established, the processes may exchange data. An NS/9000 NetIPC process can communicate with other systems that support NetIPC processes.

Unlike PTOp, NetIPC does not provide a call to schedule a remote process. Remote processes must be manually started or can be daemons that are started at system start up.

Table C-2 maps the DS/1000-IV PTOp calls to similar NS/9000 NetIPC calls. Most of the NetIPC calls have no PTOp equivalents; therefore, they are not listed in the table. These calls are not similar to any PTOp calls because they are primarily used to create and establish virtual circuit connections. The NetIPC calls that have no PTOp equivalents include `ipccconnect()`, `ipccreate()`, `ipcdest()`, `ipclookup()`, `ipcname()`, `ipcnamerase()`, `ipcrecvcn()`, `ipcselect()`, `addopt()`, `initopt()`, and `readopt()`.

NetIPC is described in detail in the *NetIPC Programmer's Guide*.

Table C-2. PTOP Calls vs. NetIPC Calls

| PTOP Call | NetIPC Call | Comparison |
|------------------|-------------------------|--|
| POPEN | No similar NetIPC call. | NetIPC does not provide a call to schedule a peer process. |
| PREAD | ipcrecv() | PREAD allows a PTOP master program to receive data contained in the buffer parameter of a slave program's ACCEPT call. The master program must call PREAD before the slave program can transmit data via an ACCEPT call. Ipcrecv() allows a NetIPC process to receive data queued on a virtual circuit connection. The data becomes queued on this connection when another NetIPC process calls ipcsend(). |
| PWRIT | ipcsend() | PWRIT allows a PTOP master program to transfer data contained in its buffer parameter to the buffer parameter of a slave program's GET call. Ipcsend() allows a NetIPC process to send data on a virtual circuit connection. The data becomes queued on this connection and may be dequeued by another NetIPC process when that process calls ipcrecv(). |
| PCONT | ipcsend() | PCONT allows a PTOP master program to transfer data contained in its tag parameter to the tag parameter of a slave program's GET call. |
| PCLOS | ipcshutdown() | PCLOS allows a PTOP master program to terminate a slave program. If the slave program resides on an HP 1000 node, PCLOS also terminates logical communication with that node. Ipcshutdown() may be used to abort a virtual circuit connection. This terminates logical communication with a peer process over that connection. Ipcshutdown() cannot be used to terminate a peer process; NetIPC does not provide a call with this functionality. |

Table C-2. PTOp Calls vs. NetIPC Calls

| PTOP Call | NetIPC Call | Comparison |
|-----------|----------------------------|--|
| PNRPY | ipccontrol() | PNRPY allows a PTOp master program to issue PWRIT, PCONT and PCLOS requests asynchronously. Master programs that use this call will not be suspended when they issue requests to send data to, or to terminate, slave programs. The NetIPC call <code>ipccontrol()</code> may be used to enable asynchronous I/O between NetIPC processes. Unlike PNRPY, <code>ipccontrol</code> allows processes to both send and receive data asynchronously by placing the sockets shared by the processes in asynchronous mode. |
| GET | ipcrecv() | The main function of the PTOp slave call GET is to receive master program requests (PWRIT, PREAD, etc.) However, the tag and buffer parameters of the GET call can be used to receive data sent by the master program. The NetIPC call <code>ipcrecv()</code> is similar to GET only in that it allows a process to receive data. (Refer to the discussion of PREAD above for more information on <code>ipcrecv()</code> .) |
| ACCEPT | ipcrecv() and ipcsend() | The PTOp slave call ACCEPT allows PTOp slave programs to receive data from, and send data back, to PTOp master programs. When a master program sends data via a call to PWRIT, the buffer parameter of the ACCEPT call can be used to receive the data. When a master program requests data via a call to PREAD, the ACCEPT's buffer parameter contains the data that will be transmitted to the master program. The ACCEPT call also contains a tag parameter that can be used to send data to the master program. The ACCEPT call's data acceptance and transmission functions are similar to <code>ipcrecv()</code> and <code>ipcsend()</code> , respectively. (Refer to the discussion of PWRIT and PREAD above for more information on these NetIPC calls.) |

| Table C-2. PTOP Calls vs. NetIPC Calls | | |
|--|---------------|---|
| PTOP Call | NetIPC Call | Comparison |
| REJECT | ipcsend() | The main function of the PTOP slave call REJECT is to reject a master request. REJECT also contains a tag field that can be used to transmit data back to the master program. This secondary feature of REJECT is similar to the NetIPC call ipcrecv(). (Refer to the discussion of PREAD above for more information on ipcrecv().) |
| FINIS | ipcshutdown() | The PTOP slave call FINIS is similar to the PTOP master call PCLOS in that it terminates communication between two programs. The NetIPC call ipcshutdown() terminates logical communication over a certain connection. |

Remote Resource Access

DS/1000-IV provides two services that allow you to interactively access remote resources: REMAT and RMOTE.

DS/1000-IV also provides two services that allow you to programmatically access remote resources: Distributed Executive (DEXEC) and Remote File Access (RFA).

DS/1000-IV supports programmatic access to Image/1000 data bases on remote systems.

| | |
|-------------|---|
| Note | There is no way to interactively or programmatically access remote resources using NS/9000 systems. |
|-------------|---|

NS/1000 to NS/9000 Migration

NS/1000 and NS/9000 share the following HP AdvanceNet NS user services:

- Network File Transfer (NFT).
- Network Interprocess Communication (NetIPC). (NetIPC ships with the LAN/9000 product).

NS/1000's DS/1000-IV Compatible Services (Remote File Access, Distributed Executive, Program-to-Program Communication, REMAT, RMOTE and Remote File Access) are not supported on NS/9000 nodes. NetIPC migration is discussed in the "Porting NetIPC Programs" section of *NetIPC Programmer's Guide*

Table C-3 maps the NS/1000 services to the same or similar NS/9000 services.

| Table C-3. NS/1000 vs. NS/9000 | |
|--|--|
| NS/1000 Service | NS/9000 Service |
| Network File Transfer (NFT)* | Network File Transfer (NFT)* |
| Network Interprocess Communication (NetIPC)* | Network Interprocess Communication (NetIPC)* |
| Distributed Executive (DEXEC) | Not Available |
| Program-to-Program Communication (PTOP) | Network Interprocess Communication (NetIPC) |
| REMAT | Network File Transfer (NFT) |
| RMOTE | Network File Transfer (NFT) |
| Remote File Access (RFA) | Not Available |
| Remote Data Base Access (Image/1000) | Not Available |

*Indicates compatible HP AdvanceNet NS user services.

Note

DS/1000-IV Remote File Access is not available on NS/9000 systems.

The DS/1000-IV Compatible Services are the same as the DS/1000-IV services described in the previous section, "NS/9000 for DS/1000-IV Users." Refer to this section for comparison information.

The following paragraphs compare the NS/1000 and NS/9000 HP AdvanceNet NS NFT.

Network File Transfer (NFT)

Network File Transfer (NFT) is an HP AdvanceNet NS service that is implemented on HP 1000 (A-Series) computers, HP 9000 computers, HP 3000 computers, DEC VAX computers, HP Vectra PCs and IBM PC/ATs.

Hewlett-Packard supports all combinations of cross-system NFT among the NS/1000, NS/3000, NS/9000, HP Vectra PC, IBM PC/AT (with NS), and DEC VAX (with NS) systems.

You can initiate a file transfer from an NS/9000 node in almost the same way that you initiate a file transfer from an NS/1000 node.

On an NS/1000 system, NFT is initiated by running the program DSCOPY as follows:

NS/1000 DSCOPY Syntax

```
DSCOPY [ .copydescriptor ]  
       [ .dscopycommand ]
```

The *copydescriptor* parameter is a copy descriptor. The *dscopycommand* parameter is one of the NS/1000 DSCOPY commands.

NS/9000 dscopy Syntax

On an NS/9000 system, you initiate NFT by running the program `dscopy` as follows:

```
dscopy    {copydescriptor}  
          {-i}
```

Note Program names are case sensitive on HP 9000 systems.

The *copydescriptor* parameter is a copy descriptor. The `-i` option specifies that Interactive Mode should be used. Interactive Mode is the same as running `DSCOPY` without parameters at an NS/1000 system.

Both the NS/1000 and NS/9000 `dscopy` commands use a copy descriptor. The syntax of the copy descriptor is different at each system.

NS/1000 Copy Descriptor

```
sfile[[slogin]] [>snode] {ΔT0Δ} tfile[[tlogin]] [>tnode] [,option] [,option] ...  
          { , }
```

NS/9000 Copy Descriptor

```
[option] [option] ... [[snode#]slogin#]sfile [[tnode#]tlogin#]tfile
```

Copy Descriptor Parameters

| | |
|--------------------------------|--|
| <i>sfile</i> | The source file name. |
| <i>slogin</i> or <i>slogon</i> | The log in and password, if any, at the source node. |
| <i>snode</i> | The name of the source node. |
| <i>tfile</i> | The target file name. |

tlogon or *tlogin* The log in and password, if any, at the target node.

option May be one or more of the dscopy options.

tnode The name of the target node.

DSCOPY Options

NS/1000 NFT supports a larger set of DSCOPY options than does NS/9000 NFT. The following options are not supported by NS/9000 NFT:

- FSIZE
- APPEND
- INTERCHANGE
- MOVE
- QUIET
- VARIABLE
- STRIP

The remaining NS/1000 NFT options have NS/9000 equivalents. See Table C-4.

| Table C-4. NS/1000 vs. NS/9000 NFT Options | |
|--|----------------|
| NS/1000 Option | NS/9000 Option |
| ASCII | -A |
| BINARY | -B |
| FIXED | -F |
| REPLACE | -r |
| RSIZE | -L |
| ICHAR | -d |
| SCHAR | -s |
| SILENT | Not Available |

NS/9000 also includes an additional option, -p, which causes the status of the dscopy command to be printed to the standard output file.

Refer to the *NS Cross-System NFT Reference Manual* for a complete cross-mapping of the options at all NS NFT implementations. This manual also explains how to copy files between different types of NS systems.

DSCOPY Commands

NS/1000 NFT includes ten DSCOPY commands. There are no equivalent commands in NS/9000 NFT.

Programmatic Interface

NS/1000 NFT includes a programmatic interface in the form of two calls: DSCOPY and DSCOPYBUILD. These calls are not part of NS/9000 NFT. However, you can use dscopy programmatically on an HP 9000 by using the HP-UX system call `system()`. (For more information about `system()`, refer to the *HP-UX Reference*.)

Index

A

Application layer, 1-4
ASCII character set, A-1 to A-2

B

Break count for VT3K, changing, 3-16

C

chmod command, 3-11
Consumer, 2-3
Conventions, used in this manual, 1-v
[CTRL]-D, 2-7, 2-13

D

Data link layer, 1-4
DS/1000-IV
 DEXEC service, C-7
 File transfer services, C-3
 Image/1000 data base, C-7
 Migration to NS/9000, C-2
 Migration utility, HP 1000 RTE
 program, C-2
 Program-to-Program Communication
 (PTOP), C-4
 PTOP calls and NetIPC calls, comparison
 of, C-4
 REMAT service, C-7
 REMAT ST command, C-3

RFA service, C-7
RMOTE MO command, C-3
RMOTE service, C-7
RTE CO command, C-3
Services comparison with NS/9000, C-2
dscopy command
 \$status, 2-18
 -B option, B-8
 -i option, 2-7, C-10
 -L option, B-9, B-11, B-18
 -P option, 2-15, C-12
 -r option, 2-14, B-4
 -s option, B-10
Attributes, changing target file, 2-19
Binary option, B-8
Colon, use of, 2-9, 2-11, 2-15
Copy descriptor, 2-7
Defined, 2-1
Error messages, B-1 to B-2
Errors, exit status values, 2-18
Escape characters, using, 2-16
Examples, 2-12
File protection, 2-14
Format-independent options, 2-19
Interactive mode, 2-7, 2-12, C-10
Interchange format options, 2-19
Options, 2-8, 2-19
Password security, 2-15
Pound sign, use of, 2-9, 2-11, 2-16
Print status option, C-12
Program, use in a, C-12
quit signal, B-11
Record length option, B-9, B-11, B-18

- Replace option, B-4
- Search character option, B-10
- Signals, behavior of, 2-17
- Source file node, changing, 2-7
- Syntax, C-10
- Target file node, changing, 2-7
- Target file ownership, 2-14
- Using, 2-7

E

- errno variable, B-1
- Error messages
 - dscopy, B-1
 - errno values, B-1
- Error messages, dscopy command, B-2
- Escape characters, 2-16

H

- HP 1000 computer, dscopy error messages, B-3, B-9, B-11 to B-12

I

- Initiator, 2-3
- Interchange format, 2-4
- interrupt signal, 2-17

J

- Job control, using to suspend vt3k, 3-9

L

- Link, communication, 1-1
- Local Area Network (LAN), 1-2

M

- Master-to-slave communication, C-4
- Migration to HP 9000, C-1

N

NetIPC

- See Network Interprocess Communication

- NetIPC errors, vt3k, 3-5

Network File Transfer (NFT)

- Connectivity, cross-system, C-3, C-9
- Consumer, 2-3
- Copying to an HP 3000 computer, 2-15, 2-22
- Data interpretation, 2-6
- Defined, 2-1
- dscopy command, 2-7
- dscopy options, 2-19
- Escape characters, 2-16
- File copying formats, 2-4
- HP-UX file types, 2-23
- Initiator, 2-3
- Interchange format, 2-5
- Lock word, 2-15, 2-22
- OSI model, corresponding layer, 1-4
- Producer, 2-3
- Security, 2-14
- Services provided, for user, 1-5
- Terminology, 2-3
- Three-node model, 2-3
- Transparent format, 2-4

Network Interprocess Communication (NetIPC)

- Defined, 1-5
- DS/1000-IV vs. NS/9000, C-4
- NS/1000 to NS/9000 Migration, C-8
- OSI model, where it fits, 1-4

- Network layer, 1-4

- Network, computer, 1-1

NFT

See Network File Transfer
Nodal management services, 1-6
Node name

Defined, 1-7

Domain, 1-7

Organization, 1-7

Node, defined, 1-1

NS/1000

DSCOPY and dscopy commands, option
comparison, C-11

DSCOPY call, C-12

DSCOPY command syntax, C-9

DSCOPY command, options, C-11

DSCOPYBUILD call, C-12

Migration to NS/9000, C-8

Network File Transfer (NFT),
cross-system, C-9

Services comparison with NS/9000, C-8

O

Open Systems Interconnection (OSI)
model, 1-3

P

Packet, 1-4

Path name length, 2-10

Peer-to-peer communication, C-4

Physical layer, 1-4

Porting to HP 9000, C-1

Presentation layer, 1-4

Producer, 2-3

Protocol, 1-3

Q

quit signal, 2-17, B-11

R

Remote File Access (RFA),
discontinued, 1-5

S

Security

File protection, 2-14

Password, 2-9, 2-11, 2-15

Protecting VT3K input files, 3-11

Session layer, 1-4

system(), system call, C-12

T

Transparent format, 2-4

Transport layer, 1-4

U

User services, 1-5

/usr/include/sys/errno.h, B-1

V

VT3K

-a option, 3-12

-f option, 3-14

-I option, 3-13

-li option, 3-14

-lo option, 3-14

-t option, 3-15

Aborting VT3K, 3-8

Applications supported, 3-1

chmod command, 3-11

Enabling typeahead, 3-15

Escape command mode, activating, 3-8

Exiting VT3K, 3-6

- Input file, using for automatic execution, 3-13
- Input file, using for automatic login, 3-12
- Input files, protecting, 3-11
- Invoking VT3K, 3-3
- Job control, using to suspend VT3K, 3-9
- lio option, 3-14
- Logging input and output to a file, 3-14
- Logging into a remote host, 3-4
- Logging out, of remote HP 3000, 3-6
- NetIPC errors, 3-5
- OSI model, corresponding layer, 1-4
- Overview, 3-1
- Preparing to use, 3-1
- Returning to HP 3000, after suspending or aborting VT3K, 3-10
- Returning to HP-UX from MPE login, 3-7
- Services provided, for user, 1-5
- Suspending VT3K, 3-9
- Terminals you can use, 3-2
- Termination codes, 3-5
- Timing values, changing, 3-16
- Using VT3K, procedure 3-3
- Using VT3K, responding to unexpected results, 3-5

W

- Wide Area Network (WAN), 1-2

Please send directory corrections to:

Test & Measurement Catalog
Hewlett-Packard Company
3200 Hillview Avenue
Palo Alto, CA 94304
Tel: (415) 857-4706
Fax: (415) 857-3880

HEADQUARTERS OFFICES

If there is no sales office listed for your area, contact one of these headquarters offices.

ASIA

Hewlett-Packard Asia Ltd.
22/F Bond Centre, West Tower
89 Queensway, Central
HONG KONG
G.P.O. Box 863, Hong Kong
Tel: 5-8487777
Telex: 76793 HPA HX
Cable: HPASIAL TD

CANADA

Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
MISSISSAUGA, Ontario L4V 1M8
Tel: (416) 678-9430
Fax: (416) 678-9421

EASTERN EUROPE

Hewlett-Packard Ges.m.b.h.
Lieblgasse 1
P.O. Box 72
A-1222 VIENNA, Austria
Tel: (222) 2500
Telex: 1 3 4425 HEPA A

NORTHERN EUROPE

Hewlett-Packard S.A.
V. D. Hooplaan 241
P.O. Box 999
NL-118 LN 15 AMSTELVEEN
The Netherlands
Tel: 20 5479999
Telex: 18919 hpner

SOUTH EAST EUROPE

Hewlett-Packard S.A.
World Trade Center
110 Avenue Louis-Casai
1215 Cointrin, GENEVA, Switzerland
Tel: (022) 98 96 51
Telex: 27225 hpser
Mail Address:
P.O. Box
CH-1217 Meyrin 1
GENEVA
Switzerland

**MIDDLE EAST
AND CENTRAL AFRICA**

Hewlett-Packard S.A.
International Sales Branch
Middle East/Africa
7, rue du Bois-du-Lan
P.O. Box 364
CH-1217 Meyrin 1
GENEVA
Switzerland
Tel: (41/22) 780 7111
Fax: 783 7535

European Operations
Hewlett-Packard S.A.
150, Route du Nant d'Avril
1217 Meyrin 2
GENEVA, Switzerland
Tel: (41/22) 780 8111
Fax: (41/22) 780 8542

UNITED KINGDOM

Hewlett-Packard Ltd.
Nine Mile Ride
WOKINGHAM
Berkshire, RG11 3LL
Tel: 0344 773100
Fax: (44/344) 763526

**UNITED STATES OF
AMERICA**

Customer Information Center
(800) 752-0900
6:00 AM to 5:00 PM Pacific Time

EASTERN USA

Hewlett-Packard Co.
4 Choke Cherry Road
ROCKVILLE, MD 20850
Tel: (301) 670-4300

MIDWESTERN USA

Hewlett-Packard Co.
5201 Tollview Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800

SOUTHERN USA

Hewlett-Packard Co.
2015 South Park Place
ATLANTA, GA 30339
Tel: (404) 955-1500

WESTERN USA

Hewlett-Packard Co.
5161 Lankershim Blvd.
NORTH HOLLYWOOD, CA 91601
Tel: (818) 505-5600

**OTHER
INTERNATIONAL
AREAS**

Hewlett-Packard Co.
Intercontinental Headquarters
3495 Deer Creek Road
PALO ALTO, CA 94304
Tel: (415) 857-5027
Telex: 034-8300
Cable: HEWPACK

Hewlett-Packard Trading S.A.
Bureau de Liaison/Bureau de Sport
Villa des Lions
9, Hai Gallouli
DZ-BORDJ EL BAHRI
Tel: 76 02 07
Fax: 281 0387

ANGOLA

Teletra Angola LDA
Empresa Técnica de Equipamentos
16 rue Cons. Julio de Vilhema
LUANDA
Tel: 35515,35516
Telex: 3134

ARGENTINA

Hewlett-Packard Argentina S.A.
Montaneses 2140/50
1428 BUENOS AIRES
Tel: (54/1) 781 4059
(54/1) 781-4090

Laboratorio Rodriguez
Corswant S.R.L.
Misiones, 1156 - 1876
Bernal, Oeste
BUENOS AIRES
Tel: 252-3958, 252-4991

Argentina Esanco S.R.L.
A/ASCO 2328
1416 BUENOS AIRES
Tel: 541-58-1981, 541-59-2767
Telex: 22796 HEW PAC-AR

AUSTRALIA

Customer Information Centre
Tel: (008) 033821

**Adelaide, South
Australia Office**

Hewlett-Packard Australia Ltd.
PARKSIDE, S.A. 5063
153 Greenhill Road
ADELAIDE (Parkside) Sales
Tel: (61-8-) 272-5911
Fax: (61/8) 373-1398

**Brisbane, Queensland
Office**

Hewlett-Packard Australia Ltd.
10 Payne Road
THE GAP, Queensland 4061
Tel: 61-7-300-4133
Telex: 42133
Cable: HEWPARD Brisbane

**Canberra, Australia
Capital Territory
Office**

Hewlett-Packard Australia Ltd.
Thynne Street, Fern Hill Park
BRUCE, A.C.T. 2617
P.O. Box 257,
JAMISON, A.C.T. 2614
Tel: 61-62-51-6999
Telex: 62650
Cable: HEWPARD Canberra

**Melbourne, Victoria
Office**

Hewlett-Packard Australia Ltd.
31-41 Joseph Street
P.O. Box 221
BLACKBURN, Victoria 3130
Tel: (61/3) 895-2895
Fax: (61/3) 898-7831
Cable: HEWPARD Melbourne

**Perth,
Western Australia
Office**

Hewlett-Packard Australia Ltd.
Herdsmen Business Park
Cnr. Hasler & Gould Strs.
Osborne Park
CLAREMONT, W.A. 6017
Tel: (61/9) 242 1414
Fax: (61/9) 242-1682
Cable: HEWPARD Perth

**Sydney, New South
Wales Office**

Hewlett-Packard Australia Ltd.
17-23 Talavera Road
P.O. Box 308
NORTH RYDE, N.S.W. 2113
Sydney, Australia
Tel: (61/2) 888-4444
Fax: (61/2) 888-9072
Cable: HEWPARD Sydney

AUSTRIA

Hewlett-Packard GmbH
Verkaufsbuero Graz
Grottenhofstrasse 94
A-8052 GRAZ
Tel: 43-316-291-5660
Telex: 312375

Hewlett-Packard GmbH
Lieblgasse 1
P.O. Box 72
A-1222 VIENNA
Tel: (43/222) 2500
Fax: (43/222) 2500 Ext 444

BAHRAIN

Modern Electronic
Establishment
Hewlett-Packard Division
P.O. Box 22015
RIYADH 11495
SAUDI ARABIA
Tel: (966/1) 4763030
Telex: 595 (0495) 202049

Wael Pharmacy

P.O. Box 648
MANAMA
Tel: 256123
Telex: 8550 WAEI BN

BELGIUM

Hewlett-Packard Belgium S.A./N.V.
Blvd de la Woluwe, 100
Woluwedal
1200 BRUSSELS
Tel: (32/2) 761.31.11
Fax: (32/2) 763.06.13

BENIN

S.I.T.E.L.
Immeuble le General
Av. General de Gaulle
P.O. Box 161
ABIDJAN 01
Ivory Coast
Tel: 32 12 27
Telex: 22149

BERMUDA

Applied Computer Technologies
Atlantic House Building
P.O. Box HM 2091
Par-La-Ville Road
HAMILTON 5
Tel: 295-1616
Telex: 380 3589/ACT BA

BOLIVIA

Arrellano Ltda
Av. 20 de Octubre #2125
Casilla 1383
LA PAZ
Tel: 368541

Siser Ltda. (Sistemas de
Importacion y Servicios Ltda.)
Gabriel Gozalvez 221
Casilla 4084
LA PAZ
Tel: (591/2) 340962/
363365/343245
Fax: 35-9268

BRAZIL

Hewlett-Packard do Brasil S.A.
Praia de Botafogo 228-A-614
6. AND.-CONJ. 601
Edificio Argentina - Ala A
22250 RIO DE JANEIRO, RJ
Tel: (55/21) 552-8422
Telex: 21905 HPBR BR
Cable: HEWPACK Rio de Janeiro

BRUNEI

Komputer Wisman Sdn Bhd
G6, Chandrawaseh Cmplx.
Jalan Tutong
P.O. Box 1297,
BANDAR SERI BEGAWAN
NEGARA BRUM DARUSSALAM
Tel: 673-2-2000-70/26711

BURKINA FASSO

S.I.T.E.L.
Immeuble le General
Avenue General de Gaulle
P.O. Box 161
ABIDJAN 01
Ivory Coast
Tel: 32 12 27
Telex: 22149

CAMEROON

R.T.I.
175 Rue Blomet
75015 PARIS
France
Tel: (1) 45 31 0906
Telex: 203376
Fax: (1) 45 31 09 18

CANADA

Alberta

Hewlett-Packard (Canada) Ltd.
3030 3rd Avenue N.E.
CALGARY, Alberta T2A 6T7
Tel: (1/403) 235-3100
Fax: (1/403) 272-2299

Hewlett-Packard (Canada) Ltd.
11120-178th Street
EDMONTON, Alberta T5S 1P2
Tel: (1/403) 486-8666
Fax: (1/403) 489-8764

SALES OFFICES

Arranged alphabetically by country (cont'd)

CANADA (Cont'd)

British Columbia

Hewlett-Packard (Canada) Ltd.
10691 Shellbridge Way
RICHMOND,
British Columbia V6X 2W8
Tel: (1/604) 270-2277
Fax: (1/604) 270-0859

Manitoba

Hewlett-Packard (Canada) Ltd.
1825 Inkster Blvd.
WINNIPEG, Manitoba R2X 1R3
Tel: (204) 694-2777

New Brunswick

Hewlett-Packard (Canada) Ltd.
814 Main Street
MONCTON, New Brunswick E1C 1E6
Tel: (506) 855-2841

Nova Scotia

Hewlett-Packard (Canada) Ltd.
201 Brownlow Avenue
DARTMOUTH, Nova Scotia B3B 1W2
Tel: (1/902) 469-7820
Fax: (1/902) 468-2817

Hewlett-Packard
(Canada) Ltd.
475 Hood Rd., Unit #2
MARKHAM, L3R 8H1
Tel: (416) 479-1770

Ontario

Hewlett-Packard (Canada) Ltd.
552 Newbold Street
LONDON, Ontario N6E 2S5
Tel: (1/519) 686-9181
Fax: (1/519) 686-9145

Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
MISSISSAUGA, Ontario L4V 1M8
Tel: (1/416) 678-9430
Fax: (1/416) 673-7253

Hewlett-Packard (Canada) Ltd.
2670 Queensview Dr.
OTTAWA, Ontario K2B 8K1
Tel: (1/613) 820-6483
Fax: (1/613) 820-0377

Hewlett-Packard (Canada) Ltd.
3790 Victoria Park Ave.
WILLOWDALE, Ontario M2H 3H7
Tel: (1/416) 499-2550

Quebec

Hewlett-Packard (Canada) Ltd.
17500 Trans Canada Highway
South Service Road
KIRKLAND, Quebec H9J 2X8
Tel: (1/514) 697-4232
Fax: (1/514) 697-6941

Saskatchewan

Hewlett-Packard (Canada) Ltd.
#1, 2175 Airport Rd.
SASKATOON, Saskatchewan S7L 7E1
Tel: (306) 242-3702

CHILE

Ricardo Borzutzky
Avanzados Sistemas de
Conocimientos S. A.
Austria 2041
SANTIAGO
America del Sur
Tel: (562) 223-5946/6148

CHINA, People's Republic of

China Hewlett-Packard Co., Ltd.
22/F Bond Centre, West Tower
89 Queensway, Central
HONG KONG
Tel: (852/5) 8487777
Fax: (852/5) 868 4997

China Hewlett-Packard Co., Ltd.
P.O. Box 9610, Beijing
38 Bei San Huan X1 Road
Shuang Yu Shu, Hai Dian District
BEIJING
Tel: 256-6888
Fax: 256-3207

China Hewlett-Packard Co., Ltd.
23/F Shanghai Union Building
100 Yan An Road
SHANGHAI
Tel: 203-240
Fax: 202-149

COLOMBIA

Instrumentación
H. A. Langebaek & Kier S.A.
Carrera 4A No. 52A-26
Apartado Aereo 6287
BOGOTA 1, D.E.
Tel: 212-1466
Telex: 44400 INST CO
Cable: AARIS Bogota

CONGO

Sema-Metra
16-18 Rue Barbes
92126 Montrouge Cedex
FRANCE
Tel: (1) 657/300
Telex: 200601 Semetra
Fax: (1) 46 56 96 53

COSTA RICA

Cientifica Costarricense S.A.
Avenida 2, Calle 5
San Pedro de Montes de Oca
Apartado 10159
SAN JOSÉ
Tel: 9-011-506-243-820
Telex: 3032367 GALGUR CR

Continex S.A.
Avenida 10C
Apartado 746-1000
34-36 **SAN JOSÉ**
Tel: (506) 33-0933
Telex: 2310 Continex CR
Fax: 21-6905

O. Fischel R. Y. Cia. S.A.
Apartados 434-10174
SAN JOSÉ
Tel: 23-72-44
Telex: 2379
Cable: OFIR

CYPRUS

Hellamco - M. Cotoyannis
2, Sikelianou St. & Kifissias Av.
P.O. Box 65074
N. Psychiko 15410
ATHENS
Greece
Tel: 647 79 426, 647 79 427
Telex: 224903

Telexera Ltd.
P.O. Box 1152
Valentine House
8 Stassandrou St.
NICOSIA
Tel: 45 628, 62 698
Telex: 5845 tlr cy

DEMSTAR Ltd.
P.O. Box 2260
NICOSIA
Cyprus
Tel: 44 10 64
Telex: 3085
Fax: 46 46 35

DENMARK

Hewlett-Packard A/S
Kongevejen 25
3460 **BIRKERØD**
Tel: (45/42) 816640
Fax: (45/42) 815810

Hewlett-Packard A/S
Rølgadesvej 32
DK-8240 **RISSKOV**, Aarhus
Tel: 45-06-17-6000
Telex: 37409 hpas dk

DOMINICAN REPUBLIC

Microprog S.A.
Juan Tomás Mejía y Cotes No. 60
Arroyo Hondo
SANTO DOMINGO
Tel: 565-6268
Telex: 4510 ARENTA DR (RCA)

ECUADOR

CYEDE Cia. Ltda.
Avenida Eloy Alfaro 1749
y Belgica
Casilla 6423 CCI
QUITO
Tel: 9-011-593-2-450975
Telex: 39322548 CYEDE ED

EGYPT

International Engineering Associates
6 El Gamea Street
Agouza
CAIRO
Tel: 71-21-681 348 0904
Telex: 93830 IEA UN
Cable: INTEGASSO

EL SALVADOR

IPESA de El Salvador S.A.
29 Avenida Norte 1223
SAN SALVADOR
Tel: 9-011-503-266-858
Telex: 301 20539 IPESA SAL

ETHIOPIA

R.T.I.
175 rue Blomet
75016 **PARIS**
France
Tel: (1) 45 31 09 06
Telex: 203376
Fax: (1) 45 31 09 18

FINLAND

Hewlett-Packard Finland
Field Oy
Niittylanpolku 10
00620 **HELSINKI**
Tel: (90) 757-1011
Telex: 122022 Field SF

Hewlett-Packard Oy
Piispankalliontie 17
02200 **ESPOO**
Tel: (358/0) 88721
Fax: (358/0) 887 2277

Hewlett-Packard Oy
Väinönkatu 9 C
40100 **JYVÄSKYLÄ**
Tel: (358/41) 21 85 11

Hewlett-Packard Oy
Vallatie 57
90500 **OULU**
Tel: (358/81) 340 144

FRANCE

Hewlett-Packard France
Z.I. Mercure B
Rue Berthelot
13763 Les Milles Cedex
AIX-EN-PROVENCE
Tel: 33-42-59-41-02
Telex: 410770F

Hewlett-Packard France
ZA Kergardec
Rue Fernand Forest
29239 **GOUERESNOU** (Brest)
Tel: (98) 41-87-90

Hewlett-Packard France
Chemin des Mouilles
Boite Postale 162
69131 **ECULLY** Cedex (Lyon)
Tel: (33) 72-29-32-93
Telex: 310617F

Hewlett-Packard France
Z.I. Mercure B
Rue Berthelot
F-13763 **LES MILLES** Cedex
Aix-en-Provence
Tel: (33/42) 59-41-02
Telex: 410770
Fax: 594872

Hewlett-Packard France
Parc Club des Tanneries
Batiment B4
4, Rue de la Faisanderie
67381 **LINGOLSHEIM** (Strasbourg)
Tel: (86) 76-15-00
Telex: 890141F

Hewlett-Packard France
Parc d'activités Cadéra
Quartier Jean-Mermoz
Avenue du Président JF Kennedy
33700 **MÉRIGNAC** (Bordeaux)
Tel: (33) 56-34-00-84
Telex: 550105F

Hewlett-Packard France
Miniparc-ZIRST
Chemin du Vieux Chêne
38240 **MIEYLAN** (Grenoble)
Tel: (76) 90-38-40

Hewlett-Packard France
Ru de l'Hôtelierie
Le Petit Bel Air
44470 **CARQUEFOU** (Nantes)
Tel: 40-30-38-38
Telex: 711085F

Hewlett-Packard France
Parc Tertiaire Hélopolis
Route de Micy
45380 **La CHAPELLE ST MESMIN**
(Orléans)
Tel: 38-43-93-56
Telex: 783 497F

Hewlett-Packard France
Zone Industrielle de Courtabœuf
1, av. du Canada
91947 **LES ULIS** Cedex (Orsay)
Tel: 69-82-60-60
Telex: 600048F

R.T.I. (Realisations
Télématiques Internationales)
175, rue Blomet
F-75015 **PARIS**
Tel: (33/1) 45310906
Telex: 42/203376

Hewlett-Packard France
Parc d'activités de la Poterie
Rue Louis Kerautrel-Botmel
35000 **RENNES**
Tel: 99-51-42-44
Telex: 740912F

Hewlett-Packard France
45, rue des 3 Sœurs
Centre d'Affaires Paris Nord II
F-93420 Villepinte
B.P. 60020
F-95971 **ROISSY**
CHARLES DE GAULLE Cédex
Tel: (33/48) 91-68-00
Telex: 232366
Fax: 632183

Hewlett-Packard France
P.A.T. Lavatine
3, rue Jacques Monod
BP 185
76136 **MONT-ST-AIGNAN** (Rouen)
Tel: 35-59-19-20
Telex: 770035F

Hewlett-Packard France
Innoparc
BP 167 - Voie n°7
31328 **LABEGE** Cedex (Toulouse)
Tel: 61-39-11-40
Telex: 531639F

Hewlett-Packard France
Les Cardoulines
Batiment B2
Route des Dolines
Parc d'activité de Valbonne
Sophia Antipolis
06560 **VALBONNE** (Nice)
Tel: 93-85-39-40

Hewlett-Packard France
Parc d'activité des Prés
1, Rue Papin Cedex
59658 **VILLENEUVE D'ASCO**
Tel: 20-91-41-25
Telex: 160124F

FRENCH WEST INDIES (Antilles)

R.T.I.
175, Rue Blomet
75015 PARIS
FRANCE
Tel: (1) 45 31 09 06
Telex: 203376
Fax: (1) 45 31 09 18

GABON

R.T.I. Cameroon
Distribution/Services
B.P. 3899
DOULA, CAMEROON
(Please contact R.T.I. France.)
Tel: (237) 423291
Telex: 970/5385

R.T.I.
175, rue Blomet
75015 PARIS
France
Tel: (1) 45 31 09 06
Telex: 203376
Fax: (1) 45 31 09 18

GERMAN FEDERAL REPUBLIC

Hewlett-Packard GmbH
Vertriebszentrale Deutschland
Hewlett-Packard-Strasse
Postfach 1641
D-6380 BAD HOMBURG v.d.H
Tel: (06172) 400-0
Telex: 410 844 hpbg

Hewlett-Packard GmbH
Geschäftsstelle
Keithstrasse 2-4
D-1000 BERLIN 30
Tel: (030) 21 99 04-0
Telex: 018 3405 hpbln d

Hewlett-Packard GmbH
Verbindungsstelle Bonn
Friedrich-Ebert-Allee 26
5300 BONN
Tel: (0228) 234001
Telex: 8869421

Hewlett-Packard GmbH
Vertriebszentrum Südwest
Schickardstrasse 2
D-7030 BOBLINGEN
Postfach 1427
Tel: (49/7031) 645
Fax: (49/7031) 645-429

Hewlett-Packard GmbH
Zentralbereich Mktg
Herrnberger Strasse 130
D-7030 BOBLINGEN
Tel: (49/7031) 14-0
Fax: (49/7031) 14-2999

Hewlett-Packard GmbH
Geschäftsstelle
Schleefstr. 28a
D-4600 DORTMUND-41
Tel: (0231) 45001
Telex: 822858 hepdod

Hewlett-Packard gmbh
Reparaturzentrum Frankfurt
Berner Strasse 117
6000 FRANKFURT-MAIN 60
Tel: (069) 500001-0
Telex: 413249 hpffm

Hewlett-Packard GmbH
Vertriebszentrum Nord
Kapstadtring 5
D-2000 HAMBURG 60
Tel: 49-40-63-804-0
Telex: 021 63 032 hphh d

Hewlett-Packard GmbH
Geschäftsstelle
Heidering 37-39
D-3000 HANNOVER 61
Tel: (49/511) 5706-0
Fax: (49/511) 5706-126

Hewlett-Packard GmbH
Geschäftsstelle
Rossauer Weg 2-4
D-6800 MANNHEIM
Tel: 49-0621-70-05-0
Telex: 0462105 hpmhm

Hewlett-Packard GmbH
Geschäftsstelle
Messerschmittstrasse 7
D-7910 NEU ULM
Tel: 49-0713-70-73-0
Telex: 0712816 HP ULM-D

Hewlett-Packard GmbH
Geschäftsstelle
Emmericher Strasse 13
D-8500 NÜRNBERG 10
Tel: (0911) 5205-0
Telex: 0623 860 hpnbg

Hewlett-Packard GmbH
Vertriebszentrum Ratingen
Berliner Strasse 111
D-4030 RATINGEN
Postfach 31 12
Tel: (02102) 494-0
Telex: 589 070 hprad

Hewlett-Packard GmbH
Vertriebszentrum Muenchen
Eschenstrasse 5
D-8028 TAUFKIRCHEN
Tel: 49-89-61-2070
Telex: 0524985 hpmch

Hewlett-Packard GmbH
Geschäftsstelle
Ermisallee
7517 WALDBRONN 2
Postfach 1251
Tel: (07243) 602-0
Telex: 782 838 hepk

GREAT BRITAIN See United Kingdom

GREECE

Hewlett-Packard Hellas
32, Kifissias Avenue
15125 Amaroussion
ATHENS
Greece
Tel: 6828811
Telex: 216588 hpat gr
Fax: 6832978

GUATEMALA

IPESA DE GUATEMALA
Avenida Reforma 3-48, Zona 9
GUATEMALA CITY
Tel: 316627, 317853, 66471/5
9-011-502-2-316627
Telex: 3055765 IPESA GU

GUINEA

R.T.I.
175, Rue Blomet
75015 PARIS
France
Tel: (1) 45 31 09 06
Telex: 203376
Fax: (1) 45 31 09 18

HONG KONG

Hewlett-Packard Asia, Ltd.
22/F, West Tower Bond Central
89 Queensway Central
HONG KONG
Tel: (852/5) 848-7777
Fax: (852/5) 868-4997
Cable: HEWPACK HONG KONG

ICELAND

Hewlett-Packard Iceland
Hoefdabakka 9
112 REYKJAVIK
Tel: 354-1-67-1000
Telex: 37409
Fax: 354-1-673031

INDIA

Computer products are sold through
Blue Star Ltd. All computer repairs
and maintenance service is done
through Computer Maintenance Corp.

Blue Star Ltd.
B. D. Patel House
Near Sardar Patel Colony
AHMEDABAD 380 014
Tel: 403531, 403532
Telex: 0121-234
Cable: BLUE FROST

Blue Star Ltd.
40/4 Lavelle Road
BANGALORE 560 001
Tel: 57881, 867780
Telex: 0845-430 BSLBIN
Cable: BLUESTAR

Blue Star Ltd.
Sahas
414/2 Vir Savarkar Marg
Prabhadevi
BOMBAY 400 025
Tel: 422-6155
Telex: 011-71193 BSSS IN
Cable: FROSTBLUE

Blue Star Ltd.
Kalyan, 19 Vishwas Colony
Alkapuri, BARODA, 390 005
Tel: 65235, 65236
Cable: BLUE STAR

Blue Star Ltd.
7 Hare Street
P.O. Box 506
CALCUTTA 700 001
Tel: 230131, 230132
Telex: 031-61120 BSNF IN
Cable: BLUESTAR

Blue Star Ltd.
13 Community Center
New Friends Colony
NEW DELHI 110 065
Tel: 682547
Telex: 031-2463
Cable: BLUEFROST

Blue Star Ltd.
2-2-47/1108 Bolarum Rd.
SECUNDERABAD 500 003
Tel: 72057, 72058
Telex: 0155-459
Cable: BLUEFROST

Blue Star Ltd.
T.C. 7/603 Poornima
Maruthunkuzhi
TRIVANDRUM 695 013
Tel: 65799, 65820
Telex: 0884-259
Cable: BLUESTAR

Hewlett-Packard India
Meridian Commercial Complex
6th Floor
8 Windsor Place
Janpath
NEW DELHI 110 001
Tel: 91-11384911
Telex: 31-4935 HPNDIN

INDONESIA

BERCA Indonesia P.T.
P.O.Box 496/Jkt.
Jl. Abdul Muis 62
JAKARTA
Tel: 21-373009
Telex: 46748 BERSAL IA
Cable: BERSAL JAKARTA

BERCA Indonesia P.T.
P.O.Box 2497/Jkt
Antara Bldg., 12th Floor
Jl. Medan Merdeka Selatan 17
JAKARTA-PUSAT
Tel: 21-340417
Telex: 46748 BERSAL IA

BERCA Indonesia P.T.
Jalan Kulai 24
SURABAYA
Tel: 67118
Telex: 31146 BERSAL SB
Cable: BERSAL-SURABAYA

IRAQ

Hewlett-Packard Trading S.A.
Service Operation
Al Mansour City 609/10/7
BAGHDAD
Tel: 551-49-73
Telex: 212-455 HEPAIRAQ IK

IRELAND

Hewlett-Packard Ireland Ltd.
Temple House, Temple Road
Blackrock, Co. DUBLIN
Tel: (353/1) 883399
Telex: 30439

Hewlett-Packard Ltd.
75 Belfast Rd, Carrickfergus
Belfast BT38 8PH
NORTHERN IRELAND
Tel: 09603-67333
Telex: 747626

ISRAEL

Eidan Electronic Instrument Ltd.
P.O. Box 1270
JERUSALEM 91000
16, Ohaliav St.
JERUSALEM 94467
Tel: 533 221, 553 242
Telex: 25231 AB/PAKRD IL

Computation and Measurement
Systems (CMS) Ltd.
11 Masad Street
67060
TEL-AVIV
Tel: 388 388
Telex: 33569 Motil IL

ITALY

Hewlett-Packard Italiana Spa
Via G. di Vittorio 10
20094 CORISCO (MI)
Tel: 02/4408351
Fax: 02/4409964

Hewlett-Packard Italiana Spa
Via Nuova Rivoltana 95
20090 LIMITO (MI)
Tel: 02/75761
Fax: 02/7576230

Hewlett-Packard Italiana Spa
Via Emilia 51/C
40011 ANZOLA
DELL'EMILIA (BO)
Tel: 051/731061

Hewlett-Packard Italiana Spa
Via M. Ricci 17 - Palombina Nuova
60100 ANCONA
Tel: 071/883782

Hewlett-Packard Italiana Spa
Traversa 99C Giulio Petroni 19
70124 BARI
Tel: 080/410744
Fax: 080/417891

Hewlett-Packard Italiana Spa
Via Principe Nicola 43G/C
95126 CATANIA
Tel: 095/371087
Fax: 095/388569

Hewlett-Packard Italiana Spa
Via G. Di Vittorio 9
20063 CERNUSCO S/N (MI)
Tel: 02/923691
Fax: 02/9237746

Hewlett-Packard Italiana Spa
Via Sacco e Vanzetti 1/A
50145 FIRENZE
Tel: 055/318533
Fax: 055/373965

Hewlett-Packard Italiana Spa
Viale Brigata Bisagno 2
16129 GENOVA
Tel: 010/541141
Fax: 010/591733

Hewlett-Packard Italiana Spa
Via Orazio 16
80122 NAPOLI
Tel: 081/7611444
Fax: 081/680164

Hewlett-Packard Italiana Spa
Via Pellizzo 15
35128 PADOVA
Tel: 049/8070166
Fax: 049/773097

Hewlett-Packard Italiana Spa
Via Del Tintoretto 200
00144 ROMA
Tel: 06/54831
Fax: 06/5408710

SALES OFFICES

Arranged alphabetically by country (cont'd)

ITALY (Cont'd)

Hewlett-Packard Italiana Spa
Corso Svizzera 185
10149 TORINO
Tel: 011/744044
Fax: 011/7710815

IVORY COAST

Ste Ivoirienne des Techniques
de l'Informatique
Immeuble C.N.A. - 5e etage
Avenue General de Gaulle
P.O. Box 161
ABIDJAN 01
Tel: 32 12 27
Telex: 22149

Engineering Business Concept (E.B.C.)
Angle Avenue J. Anoma et Bd.
République
08 B.P. 323 ABIDJAN 08
Tel: 32 50 24, 41 48 70
Fax: 35 37 90

JAPAN

Yokogawa-Hewlett-Packard Ltd.
Nihon-Seimei Akita
Chuo-Dori Bldg.
4-2-7 Naka-dori
AKITA, 010
Tel: (81/188) 36-5021

Yokogawa-Hewlett-Packard Ltd.
152-1, Onna
ATSUGI, Kanagawa, 243
Tel: (81/462) 25-0031
Fax: (81/462) 25-0064

Yokogawa-Hewlett-Packard Ltd.
3-1 Motochiba-Cho
CHIBA, 280
Tel: (81/472) 25-7701
Fax: (81/472) 21-0382

Yokogawa-Hewlett-Packard Ltd.
Dai-3 Hakata-Kaisei Bldg.
1-3-6 Hakata-eki Minami
Hakata-Ku, FUKUOKA 812
Tel: (81/92) 472-8731

Yokogawa-Hewlett-Packard Ltd.
Nihon-Dantai-Seimei-
Koriyama Bldg.
21-10 Toramaru-Cho,
Koriyama FUKUSHIMA, 963
Tel: (81/249) 39-7111

Yokogawa-Hewlett-Packard Ltd.
Yasuda-Seimei Hiroshima Bldg.
6-11, Hon-dori, Naka-ku
HIROSHIMA, 730
Tel: (81/82) 241-0611
Fax: (81/82) 241-0619

Yokogawa-Hewlett-Packard Ltd.
Issei Bldg.
2-3-17 Takezono, Tsukuba
IBARAGI, 305

Yokogawa-Hewlett-Packard Ltd.
Mito Mitsui Bldg.
1-4-73, Sanno-maru
Mito, IBARAKI 310
Tel: (81/292) 25-7470

Yokogawa-Hewlett-Packard Ltd.
Towa Building 2-2-3
Kaigan-dori, Chuo-ku
KOBE, 650
Tel: (81/78) 392-4791
Fax: (81/78) 392-4839

Yokogawa-Hewlett-Packard Ltd.
Kumagaya Asahi 82 Bldg.
3-4 Tsukuba
KUMAGAYA, Saitama 360
Tel: (81/485) 24-6563
Fax: (81/485) 24-9050

Yokogawa-Hewlett-Packard Ltd.
Shin-Kyoto Center Bldg.
614 Higashi-Shiokoji-cho
Karasuma-Nishi-Iru, Shiokoji-Dori
Shimogyo-Ku, KYOTO, 600
Tel: (81/75) 343-0921
Fax: (81/75) 343-4356

Yokogawa-Hewlett-Packard Ltd.
Mito Mitsui Bldg.
1-4-73, Sanno-Maru
MITO, Ibaraki 310
Tel: (81/292) 25-7470
Fax: (81/292) 31-6589

Yokogawa-Hewlett-Packard Ltd.
Nagano-Tokyoaijyo Bldg.
1081, Minamiagata-Machi
Nagano-Shi, NAGANO, 380
Tel: (81/262) 24-8012
Fax: (81/262) 24-8016

Yokogawa-Hewlett-Packard Ltd.
Nagoya Kokusai Center Building
1-47-1, Nagano, Nakamura-ku
NAGOYA, AICHI 450
Tel: (81/52) 571-5171
Fax: (81/52) 565-0896

Yokogawa-Hewlett-Packard Ltd.
Sai-Kyo-Ren Building
1-2 Dote-cho
OOMIYA-SHI SAITAMA 330
Tel: (0486) 45-8031

Yokogawa-Hewlett-Packard Ltd.
Chuo Bldg., 5-4-20 Nishi-Nakajima
4-20 Nishinakajima, 5 Chome,
Yodogawa-ku
OSAKA, 532
Tel: (81/6) 304-6021
Fax: (81/6) 304-0216

Yokogawa-Hewlett-Packard Ltd.
1-27-15, Yabe
SAGAMIHARA Kanagawa, 229
Tel: (81/427) 59-1311

Yokogawa-Hewlett-Packard Ltd.
Hamamatsu Motoshiro-Cho Daichi
Seimei Bldg 219-21, Motoshiro-Cho
Hamamatsu-shi
SHIZUOKA, 430
Tel: (81/534) 56-1771
Fax: (81/534) 552371

Yokogawa-Hewlett-Packard Ltd.
Shinjuku Daiichi Seimei Bldg.
Nishi Shinjuku 2-7-1,
Shinjuku-ku, TOKYO 163
Tel: (81/3) 348-4611
Fax: (81/3) 348-7969

Yokogawa-Hewlett-Packard Ltd.
9-1, Takakura-cho
Hachioji-shi, TOKYO, 192
Tel: 81-426-42-1231

Yokogawa-Hewlett-Packard Ltd.
Tokyo-Nissam-Minato Bldg.
1-6-34 Konan, Minato-Ku
TOKYO 108
Tel: (81/3) 458-5411

Yokogawa-Hewlett-Packard Ltd.
29-21 Takaido-Higashi, 3-chome
Suginami-ku TOKYO 168
Tel: (03) 331-6111
Telex: 232-2024 YHPTOK

Yokogawa Hokushin Electric Corp.
(YEW)
Shinjuku-NS Bldg. 10F
9-32 Nakacho 2 Chome
Shinjuku-ku
TOKYO, 163
Tel: (03) 349-1859
Telex: J27584

Yokogawa-Hewlett-Packard Ltd.
Toyota-Tokyo-Kaijo Bldg.
1-179 Miyuki-Hon-Cho
TOYODA 473
Tel: (81/565) 27-5611

Yokogawa-Hewlett-Packard Ltd.
Chiyodaseimei-Utsunomiya Bldg.
2-3-1, Ohndori, UTSUNOMIYA, Tochigi-
Shi 320
Tel: (81/286) 33-1153
Fax: (81/286) 33-1175

Yokogawa-Hewlett-Packard Ltd.
No. 2 Yasuda Bldg.
2-32-12, Tsuruyoko-cho
Kanagawa-ku, YOKOHAMA 221
Tel: (81/45) 312-1252
Fax: (81/45) 311-8328

KENYA

ADCOM Ltd., Inc., Kenya
P.O. Box 30070
NAIROBI
Tel: 331955
Telex: 22639

KOREA

Samsung Hewlett-Packard Co. Ltd.
Dongbang Yeoeudi Building
36-1 Yeoeui Do-Dong
Youngdeungpo-Ku
SEOUL, 150
Tel: (82/2) 784-4666, 784-2666
Fax: (82/2) 784-7084
Telex: 25166 SAMSAN K

KUWAIT

Al-Khaldiya Trading & Contracting
P.O. Box 830
SAFAT 13009
Tel: 242 49 10, 241 17 26
Telex: 22481 AREEG KT
Cable: VISCOUNT

LEBANON

Computer Information Systems S.A.L.
Chammam Building
P.O. Box 11-6274
DORA BEIRUT
Tel: 89 31 13, 58 18 35
Telex: 42309 chacies le
Fax: 58 18 34

LUXEMBOURG

Hewlett-Packard Belgium S.A./N.V.
Blvd de la Woluwe, 100
Woluwedal
B-1200 BRUSSELS
Tel: (32/2) 761-3111
Telex: 23-494 paloben bru

MADAGASCAR

R.T.I.
175, Rue Blomet
75015 PARIS
FRANCE
Tel: (1) 45 31 09 06
Tlx: 203376
Fax: (1) 45 31 09 18

MALAWI

Syston (Private) Ltd.
Manhattan Court
61 Second Street
P.O. Box 3458
HARARE
Zimbabwe
Tel: 739881/739885
Telex: 4122
Fax: 70 20 08

MALAYSIA

Hewlett-Packard Sales (Malaysia)
Sdn. Bhd.
9th Floor
Chung Khaw Bank Building
46, Jalan Raja Laut
50350 KUALA LUMPUR, MALAYSIA
Tel: (60/3) 298-6555
Fax: (60/3) 291-5495
Protel Engineering
P.O. Box 1917
Lot 6624, Section 64
23/4 Pending Road
Kuching, SARAWAK
Tel: 36299
Telex: 70904 PROMAL MA
Cable: PROTELENG

MALTA

R.T.I.
175, Rue Blomet
75015 PARIS
France
Tel: (1) 45 31 09 06
Telex: 203376
Fax: (1) 45 31 09 18

MAURITANIA

R.T.I.
175, Rue Blomet
75015 PARIS
France
Tel: (1) 45 31 09 06
Tlx: 203376
Fax: (1) 45 31 09 18

MAURITIUS

R.T.I.
175, Rue Blomet
75015 PARIS
France
Tel: (1) 45 31 09 06
Telex: 203376
Fax: (1) 45 31 09 18

MEXICO

Hewlett-Packard de Mexico,
S.A. de C.V.
Rio Nio No. 4049 Desp. 12
Fracc. Cordoba
JUAREZ, Mexico
Tel: 161-3-15-62

Hewlett-Packard de Mexico,
S.A. de C.V.
Condominio Kadereyta
Circuito del Mezon No. 186 Desp. 6
Col. Del Prado - 76030
QRO, Mexico
Tel: 463-6-02-71

Hewlett-Packard de Mexico,
S.A. de C.V.
Monti Morelos No. 299
Fraccionamiento Loma Bonita 45060
GUADALAJARA, Jalisco
Tel: (52/36) 31 46 00
Telex: 0684 186 ECOMEX

Hewlett-Packard de Mexico,
S.A. de C.V.
Monte Pelvoux No. 111
Lomas de Chapultepec
11000 MEXICO, D.F.
Tel: (52/5) 596 79 33
Fax: (52/5) 596 42 08 (Ext 3231)

Hewlett-Packard de Mexico,
S.A. de C.V.
Czda. del Valle
409 Ote. 4th Piso
Colonía del Valle
Municipio de Garcia
66220 NUEVO LEON
Tel: 83-78-42-40
Telex: 382410 HPMY

Hewlett-Packard Co.
Latin America Region
Customer Support Center
7208 N.W. 31st St.
MIAMI, FL 33122
United States
Tel: (305) 599-0465
Telex: 441603 HPMIAMI
Fax: 599-0277

Hewlett-Packard de Mexico,
S.A. de C.V.
Blvd. Independencia No. 2000 Ote.
Ote Zerpiso
Co 1 Estrella
27010 TORREON, COA.
Tel: (52/171) 8 22 01

MOROCCO

Sicotel
Complexe des Habous
Tour C, avenue des Far
CASABLANCA 01
Tel: 31 22 70
Telex: 27604

R.T.I.
175, Rue Blomet
75015 PARIS
France
Tel: (1) 45 31 09 06
Tlx: 203376
Fax: (1) 45 31 09 18

Socofren Maroc
164, Boulevard D' Anta
CASABLANCA
Tel: 36 08 84, 36 01 77
Telex: 23940

NETHERLANDS

Hewlett-Packard Nederland
Startbaan 16
1187 XR AMSTELVEEN
Tel: (31/20) 5476911
Telex: 13 216 HEPAN NL
Fax: (31/20) 471825

Hewlett-Packard Nederland B.V.
Bongerd 2
NL 2900AA CAPELLE A/D IJSSEL
Tel: 31-20-51-6444
Telex: 21261 HEPAC NL

Hewlett-Packard Nederland B.V.
Pastoor Petersstraat 134-136
P.O. Box 2342
NL 5600 CH EINDHOVEN
Tel: 31-40-32-8911
Telex: 51484 hepae nl
Fax: (31/40) 446546

NEW ZEALAND

Hewlett-Packard (N.Z.) Ltd.
5 Owens Road
P.O. Box 26-189
Epsom, AUCKLAND
Tel: (64/9) 605-651
Fax: (64/9) 600-507

Hewlett-Packard (N.Z.) Ltd.
186-190 Willis Street
P.O. Box 9443
WELLINGTON
Tel: (64/4) 820-400
Fax: (64/4) 843-380

NIGER

S.I.T.E.L.
Immeuble le General
Avenue General de Gaulle
PO Box 161
ABIDJAN 01
Ivory Coast
Tel: 32 12 27
Telex: 22149

NIGERIA

Management Information Systems Ltd.
3 Gerrard Road, Ikoyi
LAGOS
Tel: 68 08 87
Telex: 23582
Fax: 68 54 87

NORTHERN IRELAND

See United Kingdom

NORWAY

Hewlett-Packard Norway A/S
Oesterdalen 16-18
P.O. Box 34
N-1345 ØESTERAAS
Tel: (47/2) 24-6090
Telex: 76621 HPNAS N

Hewlett-Packard Norway A/S
Boemertg. 42
Box 2470
N-5037 SOLHEIMSVIK
Tel: (5/29) 10 72

OMAN

Suhail & Saud Bahwan
P.O. Box 169
MUSCAT/SULTANATE OF OMAN
Tel: 79 37 41
Telex: 3585 mb
Fax: 79 61 58

Imtac LLC
P.O. Box 9196
MINA AL FAHAL/SULTANATE
OF OMAN
Tel: 70-77-27, 70-77-23
Telex: 3865 Tawoos On

PAKISTAN

Mushko & Company Ltd.
House No. 16, Street No. 16
Sector F-6/3
ISLAMABAD
Tel: 824545
Telex: 54001 Muski PK
Cable: FEMUS Islamabad

Mushko & Company Ltd.
Oosman Chambers
Abdullah Haroon Road
KARACHI 0302
Tel: 524131, 524132
Telex: 2894 MUSKO PK
Cable: COOPERATOR Karachi

PANAMA

Electronico Balboa, S.A.
Calle Samuel Lewis, Ed. Alfa
Apartado 4929
PANAMA CITY
Tel: 9-011-507-636613
Telex: 368 3483 ELECTRON PG

PERU

Cia Electro Médica S.A. (ERMED)
Los Flamencos 145, Ofc. 301/2
San Isidro
Casilla 1030
LIMA 1 Peru
Tel: 9-011-511-4-414325, 41-3705
Telex: 39425257 PE PB SIS

PHILIPPINES

The Online Advanced Systems Corp.
2nd Floor, Electra House
115-117 Esteban Street
P.O. Box 1510
Legaspi Village, Makati
Metro MANILA
Tel: 815-38-10 (up to 16)
Telex: 63274 ONLINE PN

PORTUGAL

Mundinter Intercambio
Mundial de Comercio
Avenida Antonio 2761
LISBON
Tel: 53 21 31, 53 21 37
Telex: 16691

CPC Instrumentacao
Torre de Santo Antonio
rue Gregorio Lopes, Lote
Restelo
1400 LISBON
Tel: 617343/44/45/46
Telex: 27432/26054
Fax: 617345

C.P.C.S.I.
Rua de Costa Cabral 575
4200 PORTO
Tel: 493122
Telex: 26054, 27432
Fax: 48 87 21

PUERTO RICO

Hewlett-Packard Puerto Rico
Box 4048
Aguadilla, PR 00605
Tel: (809) 891-5235

Hewlett-Packard Puerto Rico
101 Munoz Rivera Avenue
Esu. Calle Ochoa
HATO REY, 00918
Tel: (809) 754-7800

QATAR

Qatar Datamation Systems
P.O. Box 350
DOHA
Tel: 41 32 82
Tlx: 4833
Fax: 42 63 78

REUNION ISLAND

R.T.I.
175, Rue Blomet
75015 PARIS
France
Tel: (33/1) 45310906
Telex: 42/203376

RWANDA

R.T.I.
175, Rue Blomet
75015 PARIS
France
Tel: (33/1) 45310906
Telex: 42/203376
Fax: (1) 45 31 09 18

SAUDI ARABIA

Modern Electronics Establishment
P.O. Box 281
Thuobah
AL-KHOBAR 31952
Tel: 895-1760, 895-1764
Telex: 671 106 HPMEEK SJ
Cable: ELECTA AL-KHOBAR

Modern Electronics Establishment
P.O. Box 1228
Redec Plaza, 6th Floor
JEDDAH
Tel: 644 96 28
Telex: 4027 12 FARNAS SJ
Cable: ELECTA JEDDAH

Modern Electronics Establishment
P.O. Box 22015
RIYADH 11495
Tel: 4763030
Telex: 402040 MEERYD SJ

SCOTLAND

See United Kingdom

SENEGAL

2SC
10, rue Tolbiac
B.P. 3716
DAKAR R.P.
(Please contact R.T.I. France.)
Tel: (221) 222248
Telex: 906/671

R.T.I.
175, Rue Blomet
75015 PARIS
France
Tel: 45310906
Telex: 203376
Fax: (1) 45 31 09 18

SINGAPORE

Hewlett-Packard Singapore Ltd.
1150 Depot Road
SINGAPORE, 0410
Tel: (65) 273 7388
Fax: (65) 278 8990

SOUTH AFRICA

Hi Performance Systems (Pty.) Ltd.
P.O. Box 120, Howard Place
CAPE TOWN 7450
Tel: (27/21) 53-7954
Fax: (27/21) 53-5119

Hi Performance Systems (Pty.) Ltd.
Private Bag Wendywood
SANDTON 2144
Tel: (27/11) 802-5111
Fax: (27/11) 802-6332

SPAIN

Hewlett-Packard Española, S.A.
Avda. Diagonal, 605
08028-BARCELONA
Tel: (34/3) 401 91 00
Telex: 52603 hpbce

Bilbao (Vizcaya) Sales
Hewlett-Packard Español, S.A.
Avda. Zugazarte, 8
48930 - Las Arenas - VIZCAYA

Hewlett-Packard Española, S.A.
Crta. N-VI, Km. 16, 500
Las Rozas
E-MADRID
Tel: (34/1) 6370011
Telex: 23515 HPE

Hewlett-Packard Española, S.A.
Avda. S. Francisco Javier, S/N
Planta 10. Edificio Sevilla 2
E-SEVILLA 5, SPAIN
Tel: (34/54/64) 4454
Telex: 72933

Hewlett-Packard Española, S.A.
Isabel La Católica, 8
46004 VALENCIA
Tel: (34/6) 351 59 44
Telex: 63435
Fax: (34/6) 351 59 44

Hewlett-Packard Española, S.A.
Avda. de Zugazarte, 8
48930 - Las Arenas
VIZCAYA
Tel: (34/4) 464 32 55
Telex: 33032

SUDAN

Mediterranean Engineering &
Trading Co., Ltd.
P.O. Box 1025
KHARTOUM
Tel: (249) 41184
Telex: 24052

R.T.I.
175, Rue Blomet
75015 PARIS
France
Tel: (1) 45 31 09 06
Tlx: 203376
Fax: (1) 45 31 09 18

SWEDEN

Hewlett-Packard Sverige AB
Östra Tullgatan 3
20011 MALMÖ
Box 6132
Tel: (46/40) 702 70
Telex: (854) 17886 (via Spånga office)
Fax: (46/40) 97 74 18

Hewlett-Packard Sverige AB
Elementvagen 16
S-7022 7 ÖREBRO
Tel: (49/19) 10 48 80
Telex: (854) 17886 (via Spånga office)

Hewlett-Packard Sverige AB
Skalholtsgatan 9, Kista
P.O. Box 19
S-16493 KISTA
Tel: 46/8/750-200
Telex: (854) 17886
Telefax: (08) 7527781

Hewlett-Packard Sverige AB
Box 266
Topasgatan 1A
S-42123 VÄSTRA-FRÖLUNDA
(Gothenburg)
Tel: (031) 891000
Telex: (854) 17886 (via Spånga office)

SWITZERLAND

Hewlett-Packard (Schweiz) AG
Clarastrasse 12
CH-4058 BASEL
Tel: (41/61) 681 59 20
Fax: (41/61) 681 98 59

Hewlett-Packard (Schweiz) AG
7, rue du Bois-du-Lan
Case postale 365-1366
CH-1217 MEYRIN 1
Tel: (41/22) 7804111
Telex: 27333 HPAG CH

Hewlett-Packard (Schweiz) AG
Allmend
CH-8967 WIDEN
Tel: (41/57) 321 111
Telex: 53933 HPAG CH
Fax: (41/57) 321 475

SYRIA

Middle East Electronics
P.O. Box 2308
Abu Rumaneh
DAMASCUS
Tel: 33 45 92
Telex: 411 771 Meesy

TAIWAN

Hewlett-Packard Taiwan Ltd.
Taipei Office
8th Floor, Hewlett-Packard Building
337 Fu Hsing North Road
TAIPEI
Tel: (02) 712-0404
Telex: 24439 HEWPACK
Cable: HEWPACK Taipei

Hewlett-Packard Taiwan Ltd.
THM Office
2, Huan Nan Road
CHUNG LI, Taoyuan
Tel: (034) 929-666

SALES OFFICES

Arranged alphabetically by country (cont'd)

TAIWAN (Cont'd)

Hewlett-Packard Taiwan Ltd.
Taichung Office
5FL, 67, Sec. 3,
Wen-Hsin Road,
TAICHUNG
Tel: (04) 254-1201

Hewlett-Packard Taiwan Ltd.
Kaohsiung Office
11/F, 456, Chung Hsiao 1st Road
KAOSHUNG
Tel: (07) 2412318

TANZANIA

Adcom Ltd, Inc. Kenya
P.O. Box 30070

NAIROBI

Kenya
Tel: 33 19 55
Telex: 22639

THAILAND

Unimesa Co. Ltd.
2540 Sukumvit Avenue
Bangna
BANGKOK 10260
Tel: 662-398-6953
Telex: 84439 Simonco TH
Cable: UNIMESA Bangkok

TOGO

S.I.T.E.L.
Immeuble le General
Avenue General de Gaulle
P.O. Box 161
ABIDJAN 01
Ivory Coast
Tel: 32 12 27
Telex: 22149

Societe Africaine De Promotion
Immeuble Sageb
Rue d'Atakpame
P.O. Box 4150
LOME
Tel: 21-62-88
Telex: 5357

TRINIDAD & TOBAGO

Caribbean Telecoms Ltd.
Corner McAllister Street &
Eastern Main Road, Laventille
P.O. Box 732
PORT-OF-SPAIN
Tel: 624-4213
Telex: 22561 CARTEL WG
Cable: CARTEL, PORT OF SPAIN

Computer and Controls Ltd.
P.O. Box 51
1 Taylor Street
PORT-OF-SPAIN
Tel: (809) 622-7719/622-7985
Telex: 38722798 COMCON WG
LOGOO AGENCY 1264

TUNISIA

Precision Electronique
5, rue de Chypre
Mutuelleville
1002 **TUNIS BELVEDERE**
Tunisia
Tel: 78 50 37
Tlx: 13238

TURKEY

E.M.A.
Mediha Eldem Sokak No. 41/6
Yenisehir
ANKARA
Tel: 131 4695, 131 9175
Telex: 46912n emsetr
Cable: EMATRADE ANKARA

Hewlett-Packard Bilgisayar Ve Olcum
Sistemleri A.S. (Headquarter)
Mesrutiyet Mah. 19 Mayıs Cad.
Nova-Baran Plaza Kat: 11-12
SISLI / ISTANBUL
Tel: 175 29 70
Telex: 39150
Fax: 175 29 92

Hewlett-Packard Bilgisayar Ve Olcum
Sistemleri A.S.
Paris Caddesi No 3
Diare 9
06670 ANKARA
Tel: 125 83 13
Telex: 46180
Fax: 125 47 45

UGANDA

Adcom Ltd, Inc. Kenya
P.O. Box 30070
NAIROBI
Kenya
Tel: 33 19 55
Telex: 22639

UNITED ARAB EMIRATES

Emirat Ltd.
P.O. Box 1641
SHARJAH
Tel: 591181
Telex: 48710 EMITAC EM
Cable: EMITAC SHARJAH
Emirat Ltd.
P.O. Box 2711
ABU DHABI
Tel: 820419-20
Cable: EMITACH ABUDHABI

Emirat Ltd.
P.O. Box 8391
DUBAI
Tel: 377591

Emirat Ltd.
P.O. Box 473
RAS AL KHAIMAH
Tel: 28133, 21270

UNITED KINGDOM

ENGLAND

Hewlett-Packard Ltd.
Customer Information Centre
King St. Lane
Winnersh, Wokingham
GB-BERKSHIRE RG11 5AR
Tel: (44/734) 784774
Telex: 847178
Fax: 777285
Hewlett-Packard Ltd.
Miller House
The Ring, BRACKNELL
Berkshire RG12 1XN
Tel: (44/344) 424-898
Fax: (44/344) 8600 15, Ext 56023

Hewlett-Packard Ltd.
Customer Sales & Support
Building 1, Filton Road
Stoke Gifford
BRISTOL, BS12 6QZ
Tel: (44/272) 236000

Hewlett-Packard Ltd.
Oakfield House, Oakfield Grove
Clifton **BRISTOL**, Avon BS8 2BN
Tel: 44-272-736 806
Telex: 444302

Hewlett-Packard Ltd.
9 Bridewell Place
LONDON EC4V 6BS
Tel: (44/583) 6565
Fax: (44/583) 6565, Ext 4713

Hewlett-Packard Ltd.
Heathside Park Rd.
Cheadle Heath, Stockport
GB-MANCHESTER SK3 0RB
Tel: (44/61) 428-0828
Telex: 668068
Fax: 4955009

Hewlett-Packard Ltd.
Harman House
No. 1 George St.
Uxbridge,
GB-MIDDLESEX UB8 1YH
Tel: (44/895) 72020
Telex: 893135
Fax: 73684

Hewlett-Packard Ltd.
Pontefract Road
NORMANTON,
West Yorkshire WF6 1RN
Tel: (44/924) 895-566
Fax: (44/924) 896-691
Telex: 557355

Hewlett-Packard Ltd.
The Quadrangle
106-118 Station Road
REDHILL, Surrey RH1 1PS
Tel: 44-737-686-55
Telex: 947234

Hewlett-Packard Ltd.
Avon House
435 Stratford Road
Shirley, **SOLIHULL**, West Midlands
B90 4BL
Tel: 44-21-745-8800
Telex: 339105

Hewlett-Packard Ltd.
Heathside Park Road
Cheadle Heath, Stockport
Cheshire SK3 0RB
Tel: (44/61) 428-0828
Fax: (44/61) 495-5009
Telex: 668068

Hewlett-Packard Ltd.
Harman House
No. 1 George Street
UXBRIDGE, Middlesex UB8 1YH
Tel: (44/895) 72020
Fax: (44/895) 73684

Hewlett-Packard Ltd.
King Street Lane
Winnersh, **WOKINGHAM**
Berkshire RG11 5AR
Tel: (44/734) 784774
Fax: (44/734) 777285 Ext 52285

NORTHERN IRELAND

Hewlett-Packard (Ireland) Ltd.
Carrickfergus Industrial Centre
75 Belfast Road, Carrickfergus
CO. ANTRIM BT38 8PM
Tel: 09603 67333

Unit 5
Bridgewood House
Newforge Lane
Malone Road
BELFAST BT95 NW
Tel: (353/232) 664-851
Fax: (353/232) 665-619

SCOTLAND

Hewlett-Packard Ltd.
1/3 Springburn Place
College Milton North
EAST KILBRIDE, G74 5NU
Tel: 035-52-49261
Fax: 03552-35929
Telex: 779615

Hewlett-Packard Ltd.
SOUTH QUEENSFERRY
West Lothian, EH30 9TG
Tel: 031-331-1188
Fax: 031-331-7412

UNITED STATES

Hewlett-Packard Co.
Customer Information Center
Tel: (800) 752-0900
Hours: 6:00 AM to 5:00 PM
Pacific Time

Alabama

Hewlett-Packard Co.
2100 Riverchase Center
Building 100 - Suite 118
BIRMINGHAM, AL 35244
Tel: (205) 988-0547
Fax: (205) 988-5308

Hewlett-Packard Co.
620 Discovery Dr.
HUNTSVILLE, AL 35806
Tel: (205) 830-2000
Fax: (205) 830-1427

Alaska

Hewlett-Packard Co.
4000 Old Seward Highway
Suite 101
ANCHORAGE, AK 99503
Tel: (907) 563-8855
Fax: (907) 561-7409

Arizona

Hewlett-Packard Co.
8080 Pointe Parkway West
PHOENIX, AZ 85044
Tel: (602) 273-8000
Fax: (602) 273-8080

Hewlett-Packard Co.
3400 East Britannia Dr.
Bldg. C, Suite 124
TUCSON, AZ 85706
Tel: (602) 573-7400
Fax: (602) 573-7429

Arkansas

Hewlett-Packard Co.
10816 Executive Center Dr
Conway Bldg. Suite 116
LITTLE ROCK, AR 72211
Tel: (501) 225-7178
Fax: (501) 221-3614

California

Hewlett-Packard Co.
26701 W. Argoura Rd.
CALABASAS, CA 91302
Tel: (818) 880-3400
Fax: (818) 880-3437

Hewlett-Packard Co.
353 Lakeside Dr
FOSTER CITY, CA 94404
Tel: (415) 378-8400
Fax: (415) 378-8405

Hewlett-Packard Co.
1907 North Gateway Blvd.
FRESNO, CA 93727
Tel: (209) 252-9652
Fax: (209) 456-9302

Hewlett-Packard Co.
1421 S. Manhattan Av.
FULLERTON, CA 92631
Tel: (714) 999-6700
Fax: (714) 778-3033

Hewlett-Packard Co.
7408 Hollister Ave. #A
GOLETA, CA 93117
Tel: (805) 685-6100
Fax: (805) 685-6163

Hewlett-Packard Co.
9800 Muirlands Ave.
IRVINE, CA 92718
Tel: (714) 472-3000
Fax: (714) 581-3607 (Direct Dial only)

Hewlett-Packard Co.
2525 Grand Avenue
LONG BEACH, CA 90815
Tel: (213) 498-1111
Fax: (213) 494-1986

Hewlett-Packard Co.
5651 West Manchester Ave.
LOS ANGELES, CA 90045
Tel: (213) 337-8000
Fax: (213) 337-8338

Hewlett-Packard Co.
321 E. Evelyn Ave.
Bldg. 330
MOUNTAIN VIEW, CA 94039

Tel: (415) 694-2000
Fax: (415) 694-0600

Hewlett-Packard Co.
5161 Lankershim Blvd.
NORTH HOLLYWOOD, CA 91601
Tel: (818) 505-5600
Fax: (818) 505-5875

Hewlett-Packard Co.
5725 W. Las Positas Blvd.
PLEASANTON, CA 94566
Tel: (415) 460-0282
Fax: (415) 460-0713

Hewlett-Packard Co.
4244 So. Market Court, Suite A
SACRAMENTO, CA 95834
Tel: (916) 929-7222
Fax: (916) 927-7152

Hewlett-Packard Co.
9606 Aero Drive
SAN DIEGO, CA 92123
Tel: (619) 279-3200
Fax: (619) 269-8487

Hewlett-Packard Co.
50 Fremont St. Suite 200
SAN FRANCISCO, CA 94105
Tel: (415) 882-6800
Fax: (415) 882-6805

Hewlett-Packard Co.
3003 Scott Boulevard
SANTA CLARA, CA 95054
Tel: (408) 988-7000
Fax: (408) 988-7103

Hewlett-Packard Co.
5280 Valentine Rd. Suite 205
VENTURA, CA 93003
Tel: (805) 658-6898
Fax: (805) 650-0721

Colorado

Hewlett-Packard Co.
2945 Center Green Court South
Suite A
BOULDER, CO 80301
Tel: (303) 938-3065
Fax: (303) 938-3025

Hewlett-Packard Co.
24 Inverness Place, East
ENGLEWOOD, CO 80112
Tel: (303) 649-5000
Fax: (303) 649-5787

Connecticut

Hewlett-Packard Co.
3 Parkland Dr.
DARIEN, CT 06820
Tel: (203) 656-0040
Fax: (203) 656-5563

Hewlett-Packard Co.
115 Glastonbury Blvd
GLASTONBURY, CT 06033
Tel: (203) 633-8100
Fax: (203) 659-6087

Florida

Hewlett-Packard Co.
5900 N. Andrews, Suite 100
FORT LAUDERDALE, FL 33309
Tel: (305) 938-9800
Fax: (305) 938-2293

Hewlett-Packard Co.
6800 South Point Parkway
Suite 301
JACKSONVILLE, FL 32216
Tel: (904) 636-9955
Fax: (904) 636-9955

Hewlett-Packard Co.
255 East Drive, Suite B
MELBOURNE, FL 32901
Tel: (407) 729-0704
Fax: (407) 723-4557

Hewlett-Packard Co.
6177 Lake Ellenor Drive
ORLANDO, FL 32809
Tel: (407) 859-2900
Fax: (407) 826-9309

Hewlett-Packard Co.
4700 Bayou Blvd.
Building 5
PENSACOLA, FL 32503
Tel: (904) 476-8422
Fax: (904) 476-4116

Hewlett-Packard Co.
5550 Idlewild, #150
TAMPA, FL 33634
Tel: (813) 884-3282
Fax: (813) 889-4445

Georgia

Hewlett-Packard Co.
2015 South Park Place
ATLANTA, GA 30339
Tel: (404) 955-1500
Fax: (404) 980-7669

Hewlett-Packard Co.
3607 Parkway Lane
Suite 300
NORCROSS, GA 30092
Tel: (404) 448-1894
Fax: (404) 246-5206

Hawaii

Hewlett-Packard Co.
Pacific Tower
1001 Bishop St.
Suite 2400
HONOLULU, HI 96813
Tel: (808) 526-1555
Fax: (808) 536-7873

Idaho

Hewlett-Packard Co.
11309 Chinden Blvd.
BOISE, ID 83714
Tel: (208) 323-2700
Fax: (208) 323-2528

Illinois

Hewlett-Packard Co.
2205 E. Empire St.
BLOOMINGTON, IL 61704
Tel: (309) 662-9411
Fax: (309) 662-0351

Hewlett-Packard Co.
525 W. Monroe St., Suite 1308
CHICAGO, IL 60606
Tel: (312) 930-0010
Fax: (312) 930-0986

Hewlett-Packard Co.
1200 East Diehl Road
NAPERVILLE, IL 60566
Tel: (312) 357-8800
Fax: (312) 357-9896

Hewlett-Packard Co.
5201 Tollview Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800
Fax: (312) 259-5878

Indiana

Hewlett-Packard Co.
11911 N. Meridian St.
CARMEL, IN 46032
Tel: (317) 844-4100
Fax: (317) 843-1291

Hewlett-Packard Co.
111 E. Ludwig Road
Suite 108
FT. WAYNE, IN 46825
Tel: (219) 482-4283
Fax: (219) 482-9907

Iowa

Hewlett-Packard Co.
4050 River Center Court
CEDAR RAPIDS, IA 52402
Tel: (319) 393-0606
Fax: (319) 378-1024

Hewlett-Packard Co.
4201 Corporate Dr.
WEST DES MOINES, IA 50265
Tel: (515) 224-1435
Fax: (515) 224-1870

Kansas

Hewlett-Packard Co.
North Rock Business Park
3450 N. Rock Rd.
Suite 300
WICHITA, KS 67226
Tel: (316) 636-4040
Fax: (316) 636-4504

Kentucky

Hewlett-Packard Co.
305 N. Hurstbourne Lane,
Suite 100
LOUISVILLE, KY 40222
Tel: (502) 426-0100
Fax: (502) 426-0322

Louisiana

Hewlett-Packard Co.
160 James Drive East
ST. ROSE, LA 70087
Tel: (504) 467-4100
Fax: (504) 467-4100 x 291

Maryland

Hewlett-Packard Co.
3701 Koppers Street
BALTIMORE, MD 21227
Tel: (301) 644-5800
Fax: (301) 362-7650

Hewlett-Packard Co.
2 Choke Cherry Road
ROCKVILLE, MD 20850
Tel: (301) 948-6370
Fax: (301) 948-5986

Massachusetts

Hewlett-Packard Co.
1775 Minuteeman Road
ANDOVER, MA 01810
Tel: (508) 682-1500
Fax: (508) 794-2619

Hewlett-Packard Co.
29 Burlington Mall Rd.
BURLINGTON, MA 01803-4514
Tel: (617) 270-7000
Fax: (617) 221-5240

Michigan

Hewlett-Packard Co.
3033 Orchard Vista S.E.
GRAND RAPIDS, MI 49546
Tel: (616) 957-1970
Fax: (616) 956-9022

Hewlett-Packard Co.
39550 Orchard Hill Place Drive
NOVI, MI 48050
Tel: (313) 349-9200
Fax: (313) 349-9240

Hewlett-Packard Co.
560 Kirts Rd.
Suite 101
TROY, MI 48064
Tel: (313) 362-5180
Fax: (313) 362-3028

Minnesota

Hewlett-Packard Co.
2025 W. Larpenteur Ave.
ST. PAUL, MN 55113
Tel: (612) 644-1100
Fax: (612) 641-9787

Mississippi

Hewlett-Packard Co.
800 Woodland Parkway, Suite 101
RIDGELAND, MS 39157
Tel: (601) 957-0730
Fax: (601) 957-2515

Missouri

Hewlett-Packard Co.
13001 Hollenberg Drive
BRIDGETON 63044
Tel: (314) 344-5100
Fax: (314) 344-5273

Hewlett-Packard Co.
6601 Winchester Ave.
KANSAS CITY, MO 64133
Tel: (816) 737-0071
Fax: (816) 737-4690

Montana

Hewlett-Packard Co.
13001 Hollenberg Drive
BRIDGETON, MT 63044
Tel: (314) 344-5100
Fax: (314) 344-5273

Nebraska

Hewlett-Packard
11626 Nicholas St.
OMAHA, NE 68154
Tel: (402) 493-0300
Fax: (402) 493-4334

New Jersey

Hewlett-Packard Co.
120 W. Century Road
PARAMUS, NJ 07653
Tel: (201) 599-5000
Fax: (201) 599-5382

Hewlett-Packard Co.
10 Sylvan Way
PARSIPPANY, NJ 07054
Tel: (201) 682-4000
Fax: (201) 682-4031

Hewlett-Packard Co.
20 New England Av.
PISCATAWAY, NJ 08854
Tel: (201) 562-6100
Fax: (201) 562-6246

New Mexico

Hewlett-Packard Co.
7801 Jefferson N.E.
ALBUQUERQUE, NM 87109
Tel: (505) 823-6100
Fax: (505) 823-1243

Hewlett-Packard Co.
1362-C Trinity Dr.
LOS ALAMOS, NM 87544
Tel: (505) 662-6700
Fax: (505) 662-4312

New York

Hewlett-Packard Co.
5 Computer Drive South
ALBANY, NY 12205
Tel: (518) 458-1550
Fax: (518) 458-1550 x 0393

Hewlett-Packard Co.
130 John Muir Dr.
AMHERST, NY 14228
Tel: (716) 689-3003
Fax: (716) 636-7034

Hewlett-Packard Co.
200 Cross Keys Office Park
FAIRPORT, NY 14450
Tel: (716) 223-9950
Fax: (716) 223-6331

Hewlett-Packard Co.
7641 Henry Clay Blvd.
LIVERPOOL, NY 13088
Tel: (315) 451-1820
Fax: (315) 451-1820 x 255

Hewlett-Packard Co.
No. 1 Pennsylvania Plaza
55th Floor
34th Street & 7th Avenue
MANHATTAN NY 10119
Tel: (212) 971-0800
Fax: (212) 330-6967

Hewlett-Packard Co.
2975 Westchester Ave
PURCHASE, NY 10577
Tel: (914) 935-6300
Fax: (914) 935-6497

Hewlett-Packard Co.
Executive Square Office Bldg.
66 Middlebush Rd.
WAPPINGERS FALLS, NY 12590
Tel: (914) 298-9125
Fax: (914) 298-9154

Hewlett-Packard Co.
3 Crossways Park West
WOODBURY, NY 11797
Tel: (516) 682-7800
Fax: (516) 682-7806 (2)

North Carolina

Hewlett-Packard Co.
305 Gregson Dr.
CARY, NC 27511
Tel: (919) 467-6600
Fax: (919) 460-2296
(919) 460-2297

Hewlett-Packard Co.
P.O. Box 240318
CHARLOTTE, NC 28224
Tel: (704) 527-8780
Fax: (704) 523-7857

Hewlett-Packard Co.
7029 Albert Pick Rd. #100
GREENSBORO, NC 27409
Tel: (919) 665-1800
Fax: (919) 668-1797

Mailing Address
P.O. Box 26500
Greensboro, NC 27426

Ohio

Hewlett-Packard Co.
2717 S. Arlington Rd.
AKRON 44312
Tel: (216) 644-2270
Fax: (216) 644-7415

Hewlett-Packard Co.
4501 Erskine Road
CINCINNATI, OH 45242
Tel: (513) 891-9870
Fax: (513) 891-0033

SALES OFFICES

Arranged alphabetically by country (cont'd)

UNITED STATES (Cont'd)

Hewlett-Packard Co.
Moutroffe West Ave.
COPLEY, OH 44321
Tel: (216) 666-7711
Fax: (216) 666-6054

Hewlett-Packard Co.
7887 Washington Village Dr.
DAYTON, OH 45459
Tel: (513) 433-2223
Fax: (513) 433-8633

Hewlett-Packard Co.
9080 Springboro Pike
MIAMISBURG 45342
Tel: (513) 433-2223
Fax: (513) 433-3633

Hewlett-Packard Co.
15885 Sprague Road
STRONGSVILLE, OH 44136
Tel: (216) 243-7300
Fax: (216) 234-7230

Hewlett-Packard Co.
One Maritime Plaza, 5th Floor
720 Water Street
TOLEDO, OH 43604
Tel: (419) 242-2200
Fax: (419) 241-7655

Hewlett-Packard Co.
675 Brooksedge Blvd.
WESTERVILLE, OH 43081
Tel: (614) 891-3344
Fax: (614) 891-1476

Oklahoma

Hewlett-Packard Co.
3525 N.W. 56th St.
Suite C-100
OKLAHOMA CITY, OK 73112
Tel: (405) 946-9499
Fax: (405) 942-2127

Hewlett-Packard Co.
6655 South Lewis,
Suite 105
TULSA, OK 74136
Tel: (918) 481-6700
Fax: (918) 481-2250

Oregon

Hewlett-Packard Co.
9255 S. W. Pioneer Court
WILSONVILLE, OR 97070
Tel: (503) 682-8000
Fax: (503) 682-8155

Pennsylvania

Hewlett-Packard Co.
Heatherwood Industrial Park
50 Dorchester Rd.
P.O. Box 6080
HARRISBURG, PA 17112
Tel: (717) 657-5900
Fax: (717) 657-5946

Hewlett-Packard Co.
111 Zeta Drive
PITTSBURGH, PA 15238
Tel: (412) 782-0400
Fax: (412) 963-1300

Hewlett-Packard Co.
2750 Monroe Boulevard
VALLEY FORGE, PA 19482
Tel: (215) 666-9000
Fax: (215) 666-2034

South Carolina

Hewlett-Packard Co.
Brookside Park, Suite 122
1 Harbison Way
COLUMBIA, SC 29212
Tel: (803) 732-0400
Fax: (803) 732-4567

Hewlett-Packard Co.
545 N. Pleasantburg Dr.
Suite 100
GREENVILLE, SC 29607
Tel: (803) 232-8002
Fax: (803) 232-8739

Tennessee

Hewlett-Packard Co.
One Energy Center Suite 200
Pelissippi Pkwy.
KNOXVILLE, TN 37932
Tel: (615) 966-4747
Fax: (615) 966-8147

Hewlett-Packard Co.
889 Ridge Lake Blvd.,
Suite 100
MEMPHIS, TN 38119
Tel: (901) 763-4747
Fax: (901) 762-9723

Hewlett-Packard Co.
44 Vantage Way,
Suite 160
NASHVILLE, TN 37228
Tel: (615) 255-1271
Fax: (615) 726-2310

Texas

Hewlett-Packard Co.
9050 Capital of Texas Highway, North
#290
AUSTIN, TX 78759
Tel: (512) 346-3855
Fax: (512) 338-7201
Mailing Address
PO Box 9431
Austin, TX 78766-9430

Hewlett-Packard Co.
5700 Cromo Dr
EL PASO, TX 79912
Tel: (915) 833-4400
Fax: (915) 581-8097

Hewlett-Packard Co.
10535 Harwin Drive
HOUSTON, TX 77036
Tel: (713) 776-6400
Fax: (713) 776-6495

Hewlett-Packard Co.
3301 West Royal Lane
IRVING, TX 75063
Tel: (214) 869-3377
Fax: (214) 830-8951

Hewlett-Packard Co.
109 E. Toronto, Suite 100
MCALLEN, TX 78503
Tel: (512) 630-3030
Fax: (512) 630-1355

Hewlett-Packard Co.
930 E. Campbell Rd.
RICHARDSON, TX 75081
Tel: (214) 231-6101
Fax: (214) 699-4337

Hewlett-Packard Co.
14100 San Pedro Ave., Suite 100
SAN ANTONIO, TX 78232
Tel: (512) 494-9336
Fax: (512) 491-1299

Utah

Hewlett-Packard Co.
3530 W. 2100 South
SALT LAKE CITY, UT 84119
Tel: (801) 974-1700
Fax: (801) 974-1780

Virginia

Hewlett-Packard Co.
840 Greenbrier Circle
Suite 101
CHESAPEAKE, VA 23320
Tel: (804) 424-7105
Fax: (804) 424-1494

Hewlett-Packard Co.
4401 Water Front Dr.
GLEN ALLEN, VA 23060
Tel: (804) 747-7750
Fax: (804) 965-9297

Hewlett-Packard Co.
2800 Electric Road Suite 100
ROANOKE, VA 24018
Tel: (703) 774-3444
Fax: (703) 989-8049

Washington

Hewlett-Packard Co.
15815 S.E. 37th Street
BELLEVUE, WA 98006
Tel: (206) 643-4000
Fax: (206) 643-8748

Hewlett-Packard Co.
N. 1225 Argonne Rd
SPOKANE, WA 99212-2657
Tel: (509) 922-7000
Fax: (509) 927-4236

West Virginia

Hewlett-Packard Co.
501 56th Street
CHARLESTON, WV 25304
Tel: (304) 925-0492
Fax: (304) 925-1910

Wisconsin

Hewlett-Packard Co.
275 N. Corporate Dr.
BROOKFIELD, WI 53005
Tel: (414) 792-8800
Fax: (414) 792-0218

URUGUAY

Pablo Ferrando S.A.C. e.l.
Avenida Italia 2877
Casilla de Correo 370
MONTEVIDEO
Tel: 59-82-802-586
Telex: 398802586

Olympia de Uruguay S.A.
Maquinas de Oficina
Avda. del Libertador 1997
Casilla de Correos 6644
MONTEVIDEO
Tel: 91-1809, 98-3807
Telex: 6342 OROU UY

VENEZUELA

Analytical Supplies, CA
Quinta #103 Impermes
Av El Centro
Los Chorrros
Apartado 75472
CARACAS
Tel: 364904, 2394047
Telex: 26274 CABIC

Hewlett-Packard de Venezuela C.A.
Residencias Tia Betty Local 1
Avenida 3 Y con Calle 75
MARACAIBO, Estado Zulia
Apartado 2646
Tel: 586175669
Telex: 62464 HPMAR

YUGOSLAVIA

Do Hermes
General Zdanova 4
YU-11000 BEOGRAD
Tel: (011) 342 641
Telex: 11433

Do Hermes
Celovska 73
CHARLESTON, WV 25304
Tel: (061) 553 170
Telex: 31583

ZAIRE

C.I.E.
Computer & Industrial Engineering
25 Ave. de la Justice Gombe
Boite Postale 10976
KINSHASA
Tel: 32 063, 32 633, 28 251
Telex: 21552
Fax: 22 850

ZAMBIA

R.J. Tilbury (Zambia) Ltd.
P.O. Box 32792
LUSAKA
Tel: 21 55 80
Telex: 40128

ZIMBABWE

Field Consolidated (Private) Ltd.
Systron Division
Manhattan Court
61 Second Street
P.O. Box 3458
HARARE
Tel: 73 98 81
Telex: 26241
Fax: 70 20 08

Please send directory corrections to:

Test & Measurement Catalog
Hewlett-Packard Company
3200 Hillview Avenue
Palo Alto, CA 94304
Tel: (415) 857-4706
Fax: (415) 857-3880

September 1989

